Zero Differential Pressure Type
Pilot Operated 2 Port Solenoid Valve

New

RoHS

Air Water Oil Heated water High temperature oil

Compact
Height

4 %Smaller[*] **(4 mm)**

(VXZ24, C37 (Brass) body)

Lightweight
Weight

27 %Lighter[**] **(150 g)**


(VXZ23, Resin body)


* Comparison with SMC conventional model

Can be used at 0 m hydraulic head!

Min. operating pressure differential: 0 MPa

(When the valve opens.)

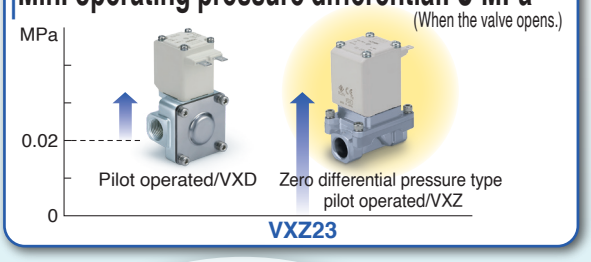

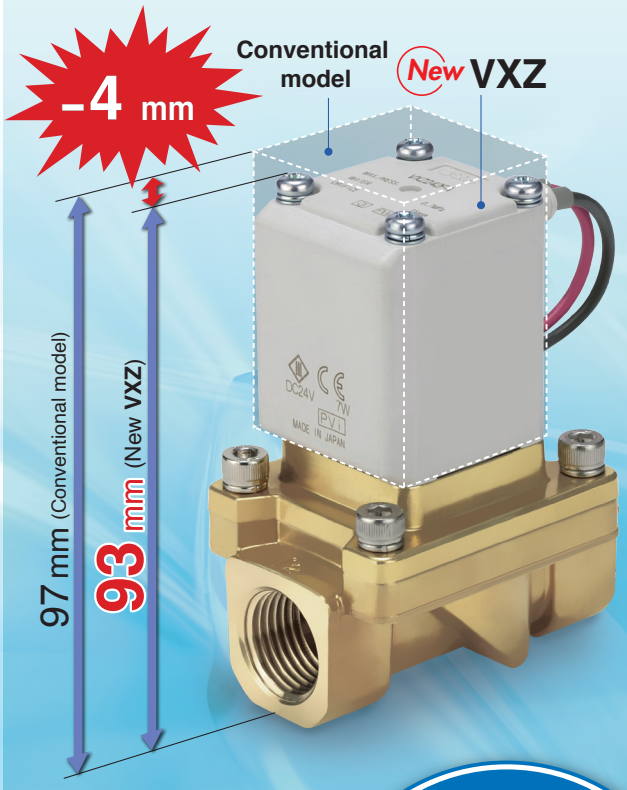


Air

Body material

Aluminium[*], Resin[*] (Built-in One-touch fittings)

* VXZ23

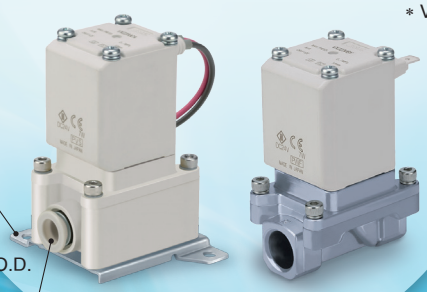

Bracket
Standard equipment

Applicable tubing O.D.
Ø 10, Ø 12
Metric size
Ø 3/8"
Inch size

Resin body Aluminium body

Air Water Oil Heated water High temperature oil

Body material

C37 (Brass), Stainless steel (VXZ23 to 26)



C37 (Brass) body Stainless steel body


Enclosure

IP65*

* Electrical entry "Faston" type terminal is IP40.

Valve type

N.C. N.O.

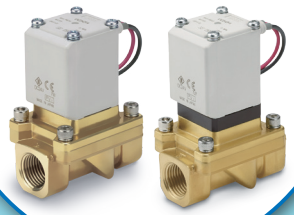

Series VXZ

SMC


CAT.EUS70-51A-UK

Zero Differential Pressure Type Pilot Operated 2 Port Solenoid Valve *Series* VXZ

Air Water Oil Heated water High temperature oil

Enclosure
IP65

Flame resistance
UL94V-0 conformed

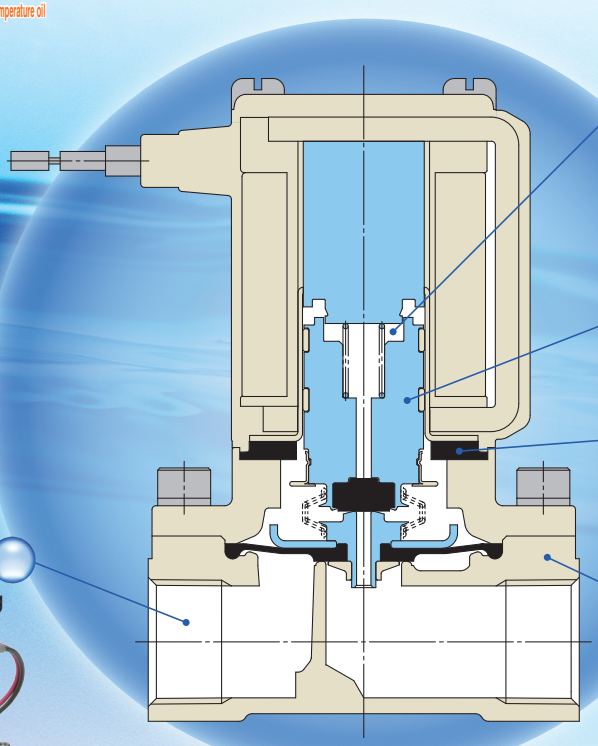


Clearance
By providing a buffer and clearance, we reduced the collision sound of the core when ON (when the valve is open). Because of the clearance, when using highly viscous fluids such as oil, the armature does not get stuck and the responsiveness when OFF (when the valve is closed) is improved.

Improved armature durability

Low-noise construction
Impact noise reduced by the rubber buffer

Piping variations
Thread piping, One-touch fitting

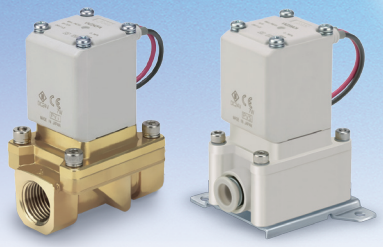

Body material
Aluminium, Resin **Air** (VXZ2$^{3}_{A}$)

C37 (Brass), Stainless steel **Water/ Oil/Air/ Heated water/ High temperature oil**


Built-in full-wave rectifier type (AC specification)

Improved durability
Service life is extended by a special construction. (compared with current AC specification)

Reduced buzz noise
Rectified to DC by a full-wave rectifier, resulting in a buzz noise reduction.

Improved OFF response
Specially constructed to improve the OFF response when operated with a higher viscosity fluid such as oil.

Low-noise construction
Specially constructed to reduce impact noise during operation.

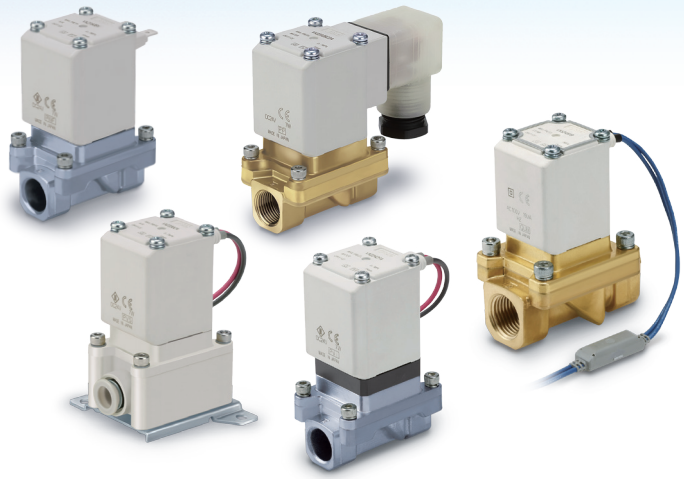

Variations

<Fluid>

Model	Applicable fluid*				
	Air	Water	Oil	Heated water	High temperature oil
For Air VXZ2□0 P.4	●				
For Water VXZ2□2 P.7	●	●			
For Oil VXZ2□3 P.10	●	●	●		
For Heated water VXZ2□5 P.13	●	●		●	
For High temperature oil VXZ2□6 P.16	●	●	●		●

<Body Size>


Model	Body size	Orifice diameter mm Ø	Port size	Body material	Fluid
VXZ2$^{3}_{A}$	10A	10	1/4, 3/8	Aluminium	Air
			Ø 10, Ø 12, Ø 3/8"	Resin	
			1/4, 3/8	C37 (Brass)	Air, Water, Oil, Heated water, High temperature oil
				Stainless steel	
VXZ2$^{4}_{B}$	15A	15	1/2	C37 (Brass)	
				Stainless steel	
VXZ2$^{5}_{C}$	20A	20	3/4	C37 (Brass)	
				Stainless steel	
VXZ2$^{6}_{D}$	25A	25	1	C37 (Brass)	
				Stainless steel	

* For details, refer to pages 35 and 36.

INDEX

Zero Differential Pressure Type Pilot Operated 2 Port Solenoid Valve

CE UKCA RoHS *Series* ***VXZ***

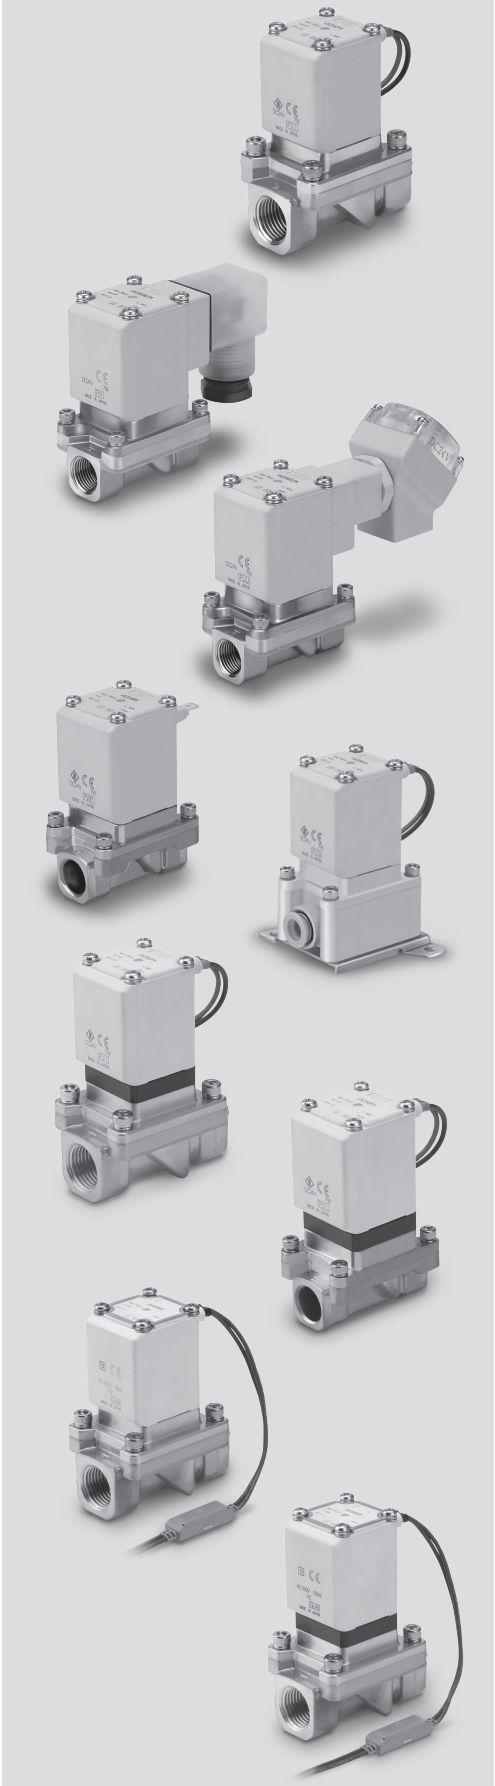

Common Specifications ..... P. 2

Selection Steps ..... P. 3

For Air

Model/Valve Specifications, Fluid and Ambient Temperature, Valve Leakage ..... P. 4, 5

How to Order ..... P. 6

For Water

Model/Valve Specifications, Fluid and Ambient Temperature, Valve Leakage ..... P. 7, 8

How to Order ..... P. 9

For Oil

Model/Valve Specifications, Fluid and Ambient Temperature, Valve Leakage .. P. 10, 11

How to Order ..... P. 12

For Heated Water

Model/Valve Specifications, Fluid and Ambient Temperature, Valve Leakage ... P. 13, 14

How to Order ..... P. 15

For High Temperature Oil

Model/Valve Specifications, Fluid and Ambient Temperature, Valve Leakage ... P. 16, 17

How to Order ..... P. 18

Other Special Options ..... P. 19

Construction ..... P. 20

Dimensions

For Air, Water, Oil

Body material: Resin ..... P. 22

Body material: Aluminium, C37 (Brass), Stainless steel ... P. 24

For Heated Water, High Temperature Oil

Body material: C37 (Brass), Stainless steel ..... P. 26

Replacement Parts ..... P. 27

Glossary of Terms ..... P. 28

Solenoid Valve Flow-rate Characteristics ..... P. 29

Flow-rate Characteristics ..... P. 34

Specific Product Precautions ..... P. 35

Safety Instructions ..... Back cover

Series VXZ
Common Specifications

Standard Specifications

Valve specifications	Valve construction		Zero differential pressure type pilot operated 2 port diaphragm type
	Withstand pressure		2.0 MPa (Resin body type 1.5 MPa)
	Body material		Aluminium, Resin, C37 (Brass), Stainless steel Note 1)
	Seal material		NBR, FKM, EPDM
	Enclosure		Dust-tight, Water-jet-proof type (equivalent to IP65) Note 2)
	Environment		Location without the presence of corrosive gases, explosive gases, or constant water adhesion
Coil specifications	Rated voltage	AC	24 VAC, 48 VAC, 100 VAC, 110 VAC, 200 VAC, 220 VAC, 230 VAC, 240 VAC
		DC	12 VDC, 24 VDC
	Allowable voltage fluctuation		±10 % of rated voltage
	Allowable leakage voltage	AC (Built-in full-wave rectifier type)	10 % or less of rated voltage
		DC	2 % or less of rated voltage
	Coil insulation type		Class B (for air, water, oil), Class H (for heated water, high temperature oil)

Note 1) Aluminium body and resin body are available only for the VXZ2$^{3}_{A}$.
Note 2) Electrical entry "Faston" type terminal is IP40.
Note 3) Voltage in ( ) indicates special voltage. (Refer to page 20.)
Note 4) For enclosure, refer to "Glossary of Terms" on page 30.

⚠ Be sure to read "Specific Product Precautions" before handling.
⚠ When pressure differential is less than 0.01 MPa, operation may become unstable. (Refer to page 21.)

Solenoid Coil Specifications

Normally Closed (N.C.)
DC Specification
Class B

Model	Power consumption [W] Note 1)	Temperature rise [°C] Note 2)
VXZ23, 24	7	55
VXZ25, 26	10.5	65

Class H

Model	Power consumption [W] Note 1)	Temperature rise [°C] Note 2)
VXZ23, 24	12	100
VXZ25, 26	15	100

Normally Open (N.O.)
DC Specification
Class B

Model	Power consumption [W] Note 1)	Temperature rise [°C] Note 2)
VXZ2A, 2B	8.5	70
VXZ2C, 2D	12.5	70

Class H

Model	Power consumption [W] Note 1)	Temperature rise [°C] Note 2)
VXZ2A, 2B	12	100
VXZ2C, 2D	15	100

Note 1) Power consumption, Apparent power: The value at ambient temperature of 20 °C and when the rated voltage is applied. (Variation: ±10 %)
Note 2) The value at ambient temperature of 20 °C and when the rated voltage is applied. The value depends on the ambient environment. This is for reference.

Normally Closed (N.C.)
AC Specification (Built-in Full-wave Rectifier Type)
Class B

Model	Apparent power [VA] Note 1) 2)	Temperature rise [°C] Note 3)
VXZ23, 24	9.5	70
VXZ25, 26	12	70

Class H

Model	Apparent power [VA] Note 1) 2)	Temperature rise [°C] Note 3)
VXZ23, 24	12	100
VXZ25, 26	15	100

Normally Open (N.O.)
AC Specification (Built-in Full-wave Rectifier Type)
Class B

Model	Apparent power [VA] Note 1) 2)	Temperature rise [°C] Note 3)
VXZ2A, 2B	10	70
VXZ2C, 2D	14	70

Class H

Model	Apparent power [VA] Note 1) 2)	Temperature rise [°C] Note 3)
VXZ2A, 2B	12	100
VXZ2C, 2D	15	100

Note 1) Power consumption, Apparent power: The value at ambient temperature of 20 °C and when the rated voltage is applied. (Variation: ±10 %)
Note 2) There is no difference in the frequency and the inrush and energized apparent power, since a rectifying circuit is used in the AC (Built-in full-wave rectifier type).
Note 3) The value at ambient temperature of 20 °C and when the rated voltage is applied. The value depends on the ambient environment. This is for reference.

Selection Steps

Selection Steps

Step 1 **Select the fluid.**

Item	Selection item	Page	Symbol	
Select the fluid.	Air	Page 4	0	❶
	Water	Page 7	2	
	Oil	Page 10	3	
	Heated water	Page 13	5	
	High temperature oil	Page 16	6	

VXZ2 3 **0** A A
❶

Step 2 **Select "Body material", "Port size" and "Orifice diameter" from "Flow rate — Pressure" of each fluid.**

Item	Selection item		Symbol	
Select from "Flow rate — Pressure." ¡ Body material ¡ Port size ¡ Orifice diameter	Body size, Valve	10A, N.C.	3	❷
	Body material	Aluminium	A	❸
	Port size	1/8		
	Orifice diameter	10		

VXZ2 **3** 0 **A** A
❷ ❸

Step 3 **Select electrical specification.**

Item	Selection item		Symbol	
Select electrical specification.	Voltage	24 VDC	A	❹
	Electrical entry	Grommet		

VXZ2 3 0 A **A**
❹

Step 4 **For other options, refer to each "How to Order".**


For Air

∗ Can be used with low vacuum (up to 133 Pa.abs).


Flow-rate Characteristics

N.C.

Symbol

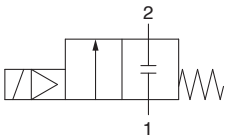

When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.

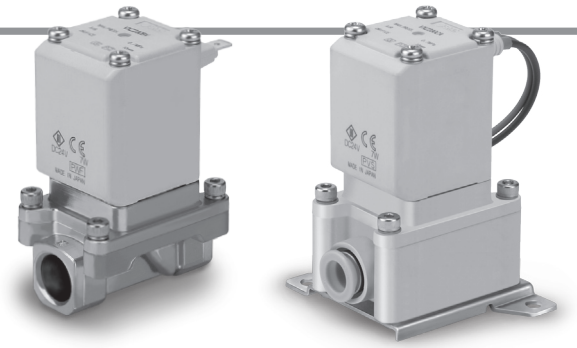

Normally Closed (N.C.)

Body material	Port size (Nominal diameter)	Orifice diameter [mmØ]	Model	Min. operating pressure differential Note 1) [MPa]	Max. operating pressure differential Note 3) [MPa]		Flow-rate characteristics				Max. system pressure Note 3) [MPa]	Note 2) Weight [g]
					AC	DC	C [dm³/(s·bar)]	b	Cv	Effective area [mm²]		
Resin	Ø 10	10	**VXZ230**	0	1.0	0.7	6.2	0.38	1.7	—	1.5	400
	Ø 3/8"						5.3		1.2			
	Ø 12						8.0		2.0			
Aluminium	1/4 (8A)						8.5	0.44	2.4			
	3/8 (10A)						9.3	0.43	2.6			
C37 (Brass), Stainless steel	1/2 (15A)	15	**VXZ240**				23.0	0.34	6.0			720
	3/4 (20A)	20	**VXZ250**			1.0	36.0	0.26	9.4			1100
	1 (25A)	25	**VXZ260**				—			185		1300

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. (Refer to page 21.)
Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.
Note 3) Refer to “Glossary of Terms” on page 28 for details on the maximum operating pressure differential and the maximum system pressure.

Fluid and Ambient Temperature

Fluid temperature [°C]	Ambient temperature [°C]
–10 Note) to 60	–20 to 60

Note) Dew point temperature: –10 °C or less

Valve Leakage Rate

Internal Leakage

Seal material	Leakage rate (Air) Note 1)
NBR, FKM	15 cm³/min or less (Aluminium body type)
	15 cm³/min or less (Resin body type)
	1 cm³/min or less (Metal body type)

External Leakage


Seal material	Leakage rate (Air) Note 1)
NBR, FKM	15 cm³/min or less (Aluminium body type)
	15 cm³/min or less (Resin body type)
	1 cm³/min or less (Metal body type)

Note 1) Leakage is the value at ambient temperature 20 °C.
Note 2) When the product is used with low vacuum (to 133 Pa.abs), give caution to the external leakage outlined above.


Flow-rate Characteristics

N.O.

Symbol

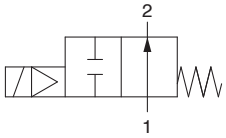

When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.

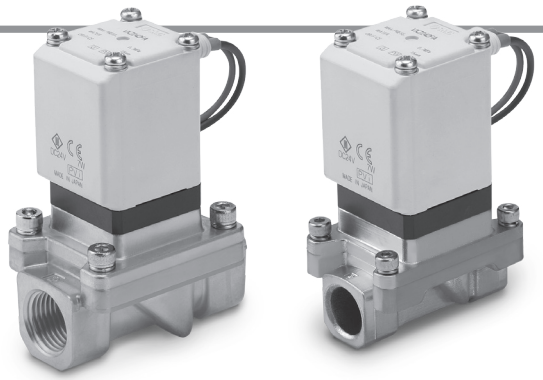

Normally Open (N.O.)

Body material	Port size (Nominal diameter)	Orifice diameter [mmØ]	Model	Min. operating pressure differential Note 1) [MPa]	Max. operating pressure differential Note 3) [MPa]		Flow-rate characteristics				Max. system pressure Note 3) [MPa]	Note 2) Weight [g]
					AC	DC	C [dm³/(s·bar)]	b	Cv	Effective area [mm²]		
Resin	Ø 10	10	**VXZ2A0**	0	0.7	0.6	6.2	0.38	1.7	—	1.5	430
	Ø 3/8"						5.3		1.2			
	Ø 12						8.0		2.0			
Aluminium	1/4 (8A)						8.5	0.44	2.4			630
	3/8 (10A)						9.3	0.43	2.6			
C37 (Brass), Stainless steel	1/2 (15A)	15	**VXZ2B0**				23.0	0.34	6.0			750
	3/4 (20A)	20	**VXZ2C0**				36.0	0.26	9.4			1150
	1 (25A)	25	**VXZ2D0**				—			185		1350

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. (Refer to page 21.)
Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.
Note 3) Refer to “Glossary of Terms” on page 28 for details on the maximum operating pressure differential and the maximum system pressure.

Fluid and Ambient Temperature

Fluid temperature [°C]	Ambient temperature [°C]
–10 Note) to 60	–20 to 60

Note) Dew point temperature: –10 °C or less

Valve Leakage Rate

Internal Leakage

Seal material	Leakage rate (Air) Note 1)
NBR, FKM	15 cm³/min or less (Aluminium body type)
	15 cm³/min or less (Resin body type)
	1 cm³/min or less (Metal body type)

External Leakage

Seal material	Leakage rate (Air) Note 1)
NBR, FKM	15 cm³/min or less (Aluminium body type)
	15 cm³/min or less (Resin body type)
	1 cm³/min or less (Metal body type)

Note 1) Leakage is the value at ambient temperature 20 °C.

How to Order (Single Unit)

VXZ2 [3] [0] [A] [A] [A] [ ]

Fluid

0	For Air

With bracket

—	No
XB	Yes

Note) Bracket is standardised with the resin body type. No need to add "XB".

∗ The bracket for aluminium, C37 (Brass) and stainless steel body type is shipped together with the product, but not assembled.

Size/Valve type

Body material/Port size/Orifice diameter

Symbol	Body size	Valve type	Symbol	Body material	Port size	Orifice diameter
3	10A	N.C.	A	Aluminium	1/4	10
A		N.O.	B		3/8	
			C	Resin	Ø 10 One-touch fitting	
			D		Ø 3/8" One-touch fitting	
			E		Ø 12 One-touch fitting	
4	15A	N.C.	F	C37 (Brass)	1/2	15
B		N.O.	G	Stainless steel		
5	20A	N.C.	H	C37 (Brass)	3/4	20
C		N.O.	J	Stainless steel		
6	25A	N.C.	K	C37 (Brass)	1	25
D		N.O.	L	Stainless steel		

Note 1) VXZ2A0 only possible with other options with one-touch fitting (–, C, H and Z).
Note 2) If you need a valve for air of C37 (Brass) or stainless steel in the port size of 1/4 or 3/8, use the valve for water.

Other options

Low concentration ozone resistant and applicable to deionized water/Oil-free/Port thread

Symbol	Low concentration ozone resistant and applicable to deionized water ∗1, ∗3 (Seal material: FKM)	Oil-free	Port thread
—	—	—	Rc, One-touch fitting∗2
A	—	—	G∗4
B			NPT
C	○	—	Rc, One-touch fitting∗2
D	—	○	G∗4
E			NPT
F	○	—	G∗4
G			NPT
H	○	○	Rc, One-touch fitting∗2
K			G∗4
L			NPT
Z	—	○	Rc, One-touch fitting∗2

∗1 Applicable to air (VXZ2□0) and water (VXZ2□2).
∗2 When the body is resin, One-touch fittings are equipped as standard.
∗3 When using deionized water or any other fluid that may corrode C37 (brass), select a stainless steel body.
∗4 For connection, prepare a fitting compliant with ISO 16030 and JIS B 8674.

Voltage/Electrical entry (coil insulation type: Class B)

Symbol	Voltage	Electrical entry
A	24 VDC	Grommet
B	100 VAC	Grommet (With surge voltage suppressor)
C	110 VAC	
D	200 VAC	
E	230 VAC	
F	24 VDC	
G	24 VDC	DIN terminal (With surge voltage suppressor)
H	100 VAC	
J	110 VAC	
K	200 VAC	
L	230 VAC	
M	24 VDC	Conduit terminal (With surge voltage suppressor)
N	100 VAC	
P	110 VAC	
Q	200 VAC	
R	230 VAC	
S	24 VDC	Conduit (With surge voltage suppressor)
T	100 VAC	
U	110 VAC	
V	200 VAC	
W	230 VAC	
Y	24 VDC	Faston terminal
Z1A	48 VAC	Grommet (With surge voltage suppressor)
Z1B	220 VAC	
Z1C	240 VAC	
Z1U	24 VAC	
Z1D	12 VDC	Grommet
Z1E	12 VDC	Grommet (With surge voltage suppressor)
Z1F	48 VAC	DIN terminal (With surge voltage suppressor)
Z1G	220 VAC	
Z1H	240 VAC	
Z1V	24 VAC	
Z1J	12 VDC	
Z1K	48 VAC	Conduit terminal (With surge voltage suppressor)
Z1L	220 VAC	
Z1M	240 VAC	

Symbol	Voltage	Electrical entry
Z1W	24 VAC	Conduit terminal (With surge voltage suppressor)
Z1N	12 VDC	
Z1P	48 VAC	Conduit (With surge voltage suppressor)
Z1Q	220 VAC	
Z1R	240 VAC	
Z1Y	24 VAC	
Z1S	12 VDC	
Z1T	12 VDC	Faston terminal
Z2A	24 VDC	DIN terminal (With surge voltage suppressor, with light)
Z2B	100 VAC	
Z2C	110 VAC	
Z2D	200 VAC	
Z2E	230 VAC	
Z2F	48 VAC	
Z2G	220 VAC	
Z2H	240 VAC	
Z2V	24 VAC	
Z2J	12 VDC	
Z2K	24 VDC	Conduit terminal (With surge voltage suppressor, with light)
Z2L	100 VAC	
Z2M	110 VAC	
Z2N	200 VAC	
Z2P	230 VAC	
Z2Q	48 VAC	
Z2R	220 VAC	
Z2S	240 VAC	
Z2W	24 VAC	
Z2T	12 VDC	
Z3A	24 VDC	DIN terminal (With surge voltage suppressor, without DIN connector)
Z3B	100 VAC	
Z3C	110 VAC	
Z3D	200 VAC	
Z3E	230 VAC	
Z3F	48 VAC	
Z3G	220 VAC	
Z3H	240 VAC	
Z3V	24 VAC	
Z3J	12 VDC	

For other special options, refer to page 19.

EPDM specification
Special electrical entry direction

Dimensions → Page 22 and after


For Water

∗ Can be used with air (Up to 133 Pa.abs for vacuum).
Note that the maximum operating pressure differential and flow-rate characteristics should be within the specifications for air.


Flow-rate Characteristics

N.C.

Symbol

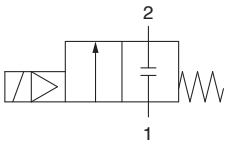

When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.

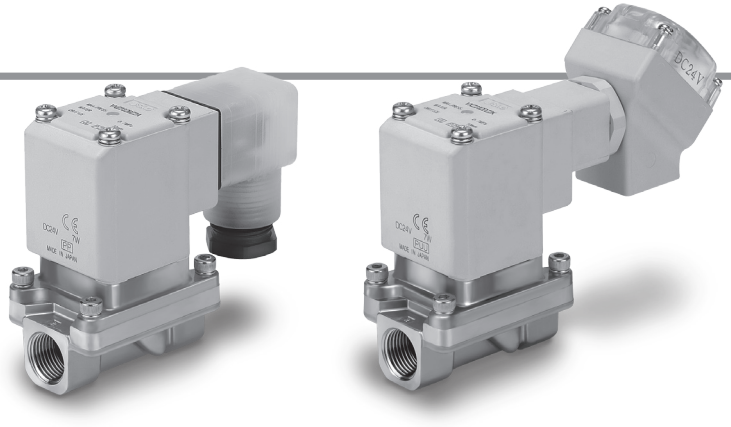

Normally Closed (N.C.)

Body material	Port size (Nominal diameter)	Orifice diameter [mmØ]	Model	Min. operating pressure differential Note 1) [MPa]	Max. operating pressure differential [MPa] Note 3)		Flow-rate characteristics		Max. system pressure Note 3) [MPa]	Weight Note 2) [g]
					AC	DC	Av x 10^{-6} m^2	Cv		
C37 (Brass), Stainless steel	1/4 (8A)	10	**VXZ232**	0	1.0	0.7	46	1.9	1.5	600
	3/8 (10A)						58	2.4		
	1/2 (15A)	15	**VXZ242**				130	5.3		720
	3/4 (20A)	20	**VXZ252**			1.0	220	9.2		1100
	1 (25A)	25	**VXZ262**				245	10.2		1300

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. (Refer to page 21.)
Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.
Note 3) Refer to “Glossary of Terms” on page 28 for details on the maximum operating pressure differential and the maximum system pressure.

Fluid and Ambient Temperature

Fluid temperature [°C]	Ambient temperature [°C]
1 to 60	–20 to 60

Note) With no freezing

Valve Leakage Rate

Internal Leakage

Seal material	Leakage rate (Water) Note 1)
NBR, FKM	0.1 cm^3/min or less


External Leakage

Seal material	Leakage rate (Water) Note 1)
NBR, FKM	0.1 cm^3/min or less


Note 1) Leakage is the value at ambient temperature 20 °C.

Flow-rate Characteristics

N.O.

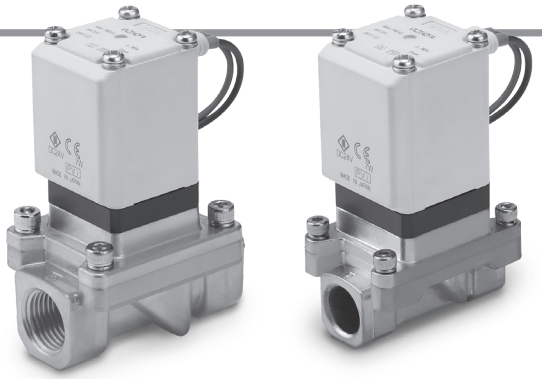

Symbol

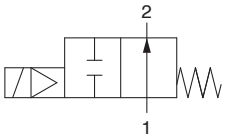

When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.

Normally Open (N.O.)

Body material	Port size (Nominal diameter)	Orifice diameter [mmØ]	Model	Min. operating pressure differential Note 1) [MPa]	Max. operating pressure differential [MPa] Note 3)		Flow-rate characteristics		Max. system pressure Note 3) [MPa]	Weight Note 2) [g]
					AC	DC	Av x 10^{-6} m^2	Cv		
C37 (Brass), Stainless steel	1/4 (8A)	10	**VXZ2A2**	0	0.7	0.6	46	1.9	1.5	630
	3/8 (10A)						58	2.4		
	1/2 (15A)	15	**VXZ2B2**				130	5.3		750
	3/4 (20A)	20	**VXZ2C2**				220	9.2		1150
	1 (25A)	25	**VXZ2D2**				245	10.2		1350

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. (Refer to page 21.)
Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.
Note 3) Refer to “Glossary of Terms” on page 28 for details on the maximum operating pressure differential and the maximum system pressure.

Fluid and Ambient Temperature

Fluid temperature [°C]	Ambient temperature [°C]
1 to 60	–20 to 60

Note) With no freezing

Valve Leakage Rate

Internal Leakage

Seal material	Leakage rate (Water) Note 1)
NBR, FKM	0.1 cm^3/min or less

External Leakage

Seal material	Leakage rate (Water) Note 1)
NBR, FKM	0.1 cm^3/min or less

Note 1) Leakage is the value at ambient temperature 20°C.

How to Order (Single Unit)

VXZ2 [3] [2] [A] [A] [A] [ ]

Fluid

2	For Water

With bracket

—	No
XB	Yes

* The bracket is shipped together with the product, but not assembled.

Size/Valve type / **Body material/Port size/Orifice diameter**

Symbol	Body size	Valve type	Symbol	Body material	Port size	Orifice diameter
3	10A	N.C.	A	C37 (Brass)	1/4	10
A		N.O.	B		3/8	
			C	Stainless steel	1/4	
			D		3/8	
4	15A	N.C.	F	C37 (Brass)	1/2	15
B		N.O.	G	Stainless steel		
5	20A	N.C.	H	C37 (Brass)	3/4	20
C		N.O.	J	Stainless steel		
6	25A	N.C.	K	C37 (Brass)	1	25
D		N.O.	L	Stainless steel		

Other options

Symbol	Seal material Note)	Oil-free	Port thread
—	NBR	—	Rc
A	NBR	—	G
B			NPT
C	FKM	—	Rc
D	NBR	□	G
E			NPT
F	FKM	—	G
G			NPT
H	FKM	□	Rc
K			G
L			NPT
Z	NBR	□	Rc

Note) For low concentration ozone resistant and deionised water, select seal material FKM.

For other special options, refer to page 19.

EPDM specification
Special electrical entry direction

Voltage/Electrical entry (coil insulation type: Class B)

Symbol	Voltage	Electrical entry
A	24 VDC	Grommet
B	100 VAC	Grommet (With surge voltage suppressor)
C	110 VAC	
D	200 VAC	
E	230 VAC	
F	24 VDC	
G	24 VDC	DIN terminal (With surge voltage suppressor)
H	100 VAC	
J	110 VAC	
K	200 VAC	
L	230 VAC	
M	24 VDC	Conduit terminal (With surge voltage suppressor)
N	100 VAC	
P	110 VAC	
Q	200 VAC	
R	230 VAC	
S	24 VDC	Conduit (With surge voltage suppressor)
T	100 VAC	
U	110 VAC	
V	200 VAC	
W	230 VAC	
Y	24 VDC	Faston terminal
Z1A	48 VAC	Grommet (With surge voltage suppressor)
Z1B	220 VAC	
Z1C	240 VAC	
Z1U	24 VAC	
Z1D	12 VDC	Grommet
Z1E	12 VDC	Grommet (With surge voltage suppressor)
Z1F	48 VAC	DIN terminal (With surge voltage suppressor)
Z1G	220 VAC	
Z1H	240 VAC	
Z1V	24 VAC	
Z1J	12 VDC	
Z1K	48 VAC	Conduit terminal (With surge voltage suppressor)
Z1L	220 VAC	
Z1M	240 VAC	

Symbol	Voltage	Electrical entry
Z1W	24 VAC	Conduit terminal (With surge voltage suppressor)
Z1N	12 VDC	
Z1P	48 VAC	Conduit (With surge voltage suppressor)
Z1Q	220 VAC	
Z1R	240 VAC	
Z1Y	24 VAC	
Z1S	12 VDC	
Z1T	12 VDC	Faston terminal
Z2A	24 VDC	DIN terminal (With surge voltage suppressor, with light)
Z2B	100 VAC	
Z2C	110 VAC	
Z2D	200 VAC	
Z2E	230 VAC	
Z2F	48 VAC	
Z2G	220 VAC	
Z2H	240 VAC	
Z2V	24 VAC	
Z2J	12 VDC	
Z2K	24 VDC	Conduit terminal (With surge voltage suppressor, with light)
Z2L	100 VAC	
Z2M	110 VAC	
Z2N	200 VAC	
Z2P	230 VAC	
Z2Q	48 VAC	
Z2R	220 VAC	
Z2S	240 VAC	
Z2W	24 VAC	
Z2T	12 VDC	
Z3A	24 VDC	DIN terminal (With surge voltage suppressor, without DIN connector)
Z3B	100 VAC	
Z3C	110 VAC	
Z3D	200 VAC	
Z3E	230 VAC	
Z3F	48 VAC	
Z3G	220 VAC	
Z3H	240 VAC	
Z3V	24 VAC	
Z3J	12 VDC	

Dimensions → Page 24 and after

For Oil

∗ Can be used with air and water.
Note that the maximum operating pressure differential and flow-rate characteristics should be within the specifications of the fluid used.


⚠ When the fluid is oil.

The kinematic viscosity must not exceed 50 mm²/s. The special construction of the armature adopted in the built-in full-wave rectifier type gives an improvement in OFF response by providing clearance on the absorbed surface when it is switched ON.


Flow-rate Characteristics

N.C.

Symbol

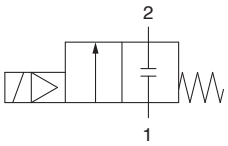

When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.

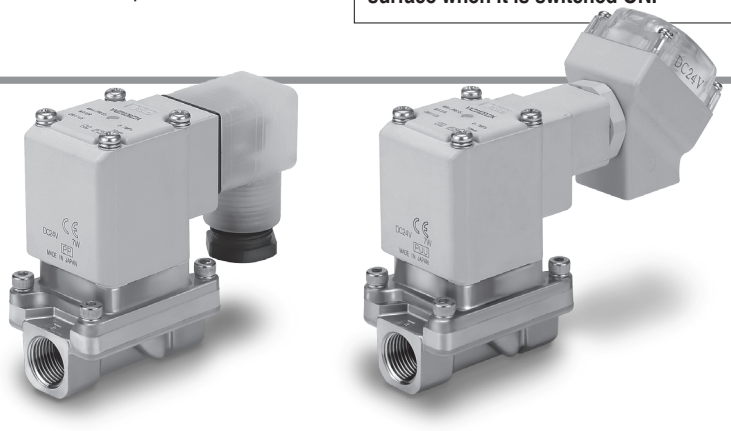

Normally Closed (N.C.)

Body material	Port size (Nominal diameter)	Orifice diameter [mmØ]	Model	Min. operating pressure differential Note 1) [MPa]	Max. operating pressure differential [MPa] Note 3)		Flow-rate characteristics		Max. system pressure Note 3) [MPa]	Weight Note 2) [g]
					AC	DC	Av x 10^{-6} m²	Cv		
C37 (Brass), Stainless steel	1/4 (8A)	10	**VXZ233**	0	0.7		46	1.9	1.5	600
	3/8 (10A)						58	2.4		
	1/2 (15A)	15	**VXZ243**				130	5.3		720
	3/4 (20A)	20	**VXZ253**				220	9.2		1100
	1 (25A)	25	**VXZ263**				245	10.2		1300

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. (Refer to page 21.)
Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.
Note 3) Refer to “Glossary of Terms” on page 28 for details on the maximum operating pressure differential and the maximum system pressure.

Fluid and Ambient Temperature

Fluid temperature [°C]	Ambient temperature [°C]
-5 Note) to 60	–20 to 60

Note) Kinematic viscosity: 50 mm²/s or less

Valve Leakage Rate

Internal Leakage

Seal material	Leakage rate (Oil) Note)
FKM	0.1 cm³/min or less

External Leakage


Seal material	Leakage rate (Oil) Note)
FKM	0.1 cm³/min or less

Note) Leakage is the value at ambient temperature 20 °C.


Flow-rate Characteristics

N.O.

Symbol

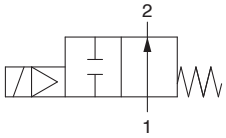

When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.

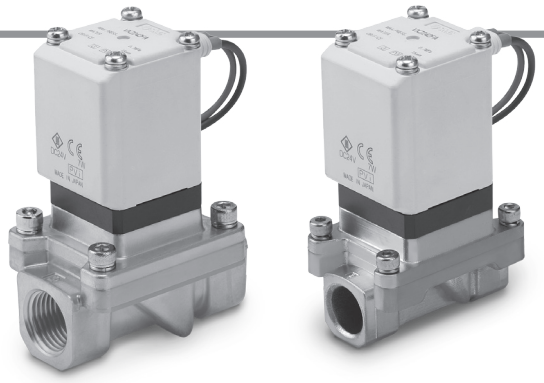

Normally Open (N.O.)

Body material	Port size (Nominal diameter)	Orifice diameter [mmØ]	Model	Min. operating pressure differential Note 1) [MPa]	Max. operating pressure differential [MPa] Note 3)		Flow-rate characteristics		Max. system pressure Note 3) [MPa]	Weight Note 2) [g]
					AC	DC	Av x 10^{-6} m^2	Cv		
C37 (Brass), Stainless steel	1/4 (8A)	10	**VXZ2A3**	0	0.7	0.6	46	1.9	1.5	630
	3/8 (10A)						58	2.4		
	1/2 (15A)	15	**VXZ2B3**				130	5.3		750
	3/4 (20A)	20	**VXZ2C3**				220	9.2		1150
	1 (25A)	25	**VXZ2D3**				245	10.2		1350

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. (Refer to page 21.)
Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.
Note 3) Refer to “Glossary of Terms” on page 28 for details on the maximum operating pressure differential and the maximum system pressure.

Fluid and Ambient Temperature

Fluid temperature [°C]	Ambient temperature [°C]
–5 Note) to 60	–20 to 60

Note) Kinematic viscosity: 50 mm^2/s or less

Valve Leakage Rate

Internal Leakage

Seal material	Leakage rate (Oil) Note)
FKM	0.1 cm^3/min or less

External Leakage

Seal material	Leakage rate (Oil) Note)
FKM	0.1 cm^3/min or less

Note) Leakage is the value at ambient temperature 20 °C.

How to Order (Single Unit)

VXZ2 [3] [3] [A] [A] [A] [ ]

Common Specifications

Seal material	FKM

Fluid

3	For Oil

With bracket

—	No
XB	Yes

∗ The bracket is shipped together with the product, but not assembled.

Size/Valve type

Symbol	Body size	Valve type
3	10A	N.C.
A		N.O.
4	15A	N.C.
B		N.O.
5	20A	N.C.
C		N.O.
6	25A	N.C.
D		N.O.

Body material/Port size/Orifice diameter

Symbol	Body material	Port size	Orifice diameter
A	C37 (Brass)	1/4	10
B		3/8	
C	Stainless steel	1/4	
D		3/8	
F	C37 (Brass)	1/2	15
G	Stainless steel		
H	C37 (Brass)	3/4	20
J	Stainless steel		
K	C37 (Brass)	1	25
L	Stainless steel		

Other options

Symbol	Oil-free	Port thread
—	—	Rc
A	—	G
B		NPT
D	□	G
E		NPT
Z	□	Rc

For other special options, refer to page 19.
Special electrical entry direction

Voltage/Electrical entry (coil insulation type: Class B)

Symbol	Voltage	Electrical entry
A	24 VDC	Grommet
B	100 VAC	Grommet (With surge voltage suppressor)
C	110 VAC	
D	200 VAC	
E	230 VAC	
F	24 VDC	
G	24 VDC	DIN terminal (With surge voltage suppressor)
H	100 VAC	
J	110 VAC	
K	200 VAC	
L	230 VAC	
M	24 VDC	Conduit terminal (With surge voltage suppressor)
N	100 VAC	
P	110 VAC	
Q	200 VAC	
R	230 VAC	
S	24 VDC	Conduit (With surge voltage suppressor)
T	100 VAC	
U	110 VAC	
V	200 VAC	
W	230 VAC	
Y	24 VDC	Faston terminal
Z1A	48 VAC	Grommet (With surge voltage suppressor)
Z1B	220 VAC	
Z1C	240 VAC	
Z1U	24 VAC	
Z1D	12 VDC	Grommet
Z1E	12 VDC	Grommet (With surge voltage suppressor)
Z1F	48 VAC	DIN terminal (With surge voltage suppressor)
Z1G	220 VAC	
Z1H	240 VAC	
Z1V	24 VAC	
Z1J	12 VDC	
Z1K	48 VAC	Conduit terminal (With surge voltage suppressor)
Z1L	220 VAC	
Z1M	240 VAC	

Symbol	Voltage	Electrical entry
Z1W	24 VAC	Conduit terminal (With surge voltage suppressor)
Z1N	12 VDC	
Z1P	48 VAC	Conduit (With surge voltage suppressor)
Z1Q	220 VAC	
Z1R	240 VAC	
Z1Y	24 VAC	
Z1S	12 VDC	
Z1T	12 VDC	Faston terminal
Z2A	24 VDC	DIN terminal (With surge voltage suppressor, with light)
Z2B	100 VAC	
Z2C	110 VAC	
Z2D	200 VAC	
Z2E	230 VAC	
Z2F	48 VAC	
Z2G	220 VAC	
Z2H	240 VAC	
Z2V	24 VAC	
Z2J	12 VDC	
Z2K	24 VDC	Conduit terminal (With surge voltage suppressor, with light)
Z2L	100 VAC	
Z2M	110 VAC	
Z2N	200 VAC	
Z2P	230 VAC	
Z2Q	48 VAC	
Z2R	220 VAC	
Z2S	240 VAC	
Z2W	24 VAC	
Z2T	12 VDC	
Z3A	24 VDC	DIN terminal (With surge voltage suppressor, without DIN connector)
Z3B	100 VAC	
Z3C	110 VAC	
Z3D	200 VAC	
Z3E	230 VAC	
Z3F	48 VAC	
Z3G	220 VAC	
Z3H	240 VAC	
Z3V	24 VAC	
Z3J	12 VDC	


Dimensions → Page 24 and after

For Heated Water


∗ Can be used with air (up to 99 °C) and water.
Note that the maximum operating pressure differential and flow-rate characteristics should be within the specifications of the fluid used.

Flow-rate Characteristics

N.C.

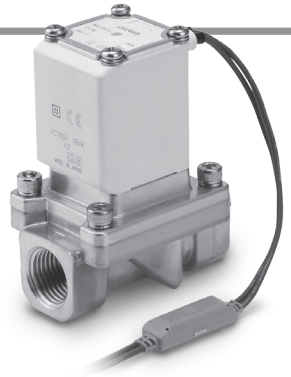

Symbol

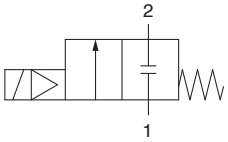

When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.

Normally Closed (N.C.)

Body material	Port size (Nominal diameter)	Orifice diameter [mmØ]	Model	Min. operating pressure differential Note 1) [MPa]	Max. operating pressure differential [MPa] Note 3)		Flow-rate characteristics		Max. system pressure Note 3) [MPa]	Weight Note 2) [g]
					AC	DC	Av x 10^{-6} m^2	Cv		
C37 (Brass), Stainless steel	1/4 (8A)	10	**VXZ235**	0	1.0	0.7	46	1.9	1.5	600
	3/8 (10A)						58	2.4		
	1/2 (15A)	15	**VXZ245**				130	5.3		720
	3/4 (20A)	20	**VXZ255**			1.0	220	9.2		1100
	1 (25A)	25	**VXZ265**				245	10.2		1300

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. (Refer to page 21.)
Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.
Note 3) Refer to “Glossary of Terms” on page 28 for details on the maximum operating pressure differential and the maximum system pressure.

Fluid and Ambient Temperature

Fluid temperature [°C]	Ambient temperature [°C]
1 to 99	–20 to 60

Note) With no freezing

Valve Leakage Rate

Internal Leakage

Seal material	Leakage rate (Water) Note)
EPDM	0.1 cm^3/min or less

External Leakage

Seal material	Leakage rate (Water) Note)
EPDM	0.1 cm^3/min or less


Note) Leakage is the value at ambient temperature 20 °C.

Flow-rate Characteristics

N.O.



Symbol

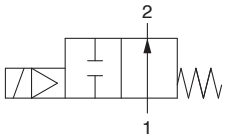

When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.

Normally Open (N.O.)

Body material	Port size (Nominal diameter)	Orifice diameter [mmØ]	Model	Min. operating pressure differential Note 1) [MPa]	Max. operating pressure differential [MPa] Note 3)		Flow-rate characteristics		Max. system pressure Note 3) [MPa]	Weight Note 2) [g]
					AC	DC	Av x 10^{-6} m^2	Cv		
C37 (Brass), Stainless steel	1/4 (8A)	10	**VXZ2A5**	0	0.7	0.6	46	1.9	1.5	630
	3/8 (10A)						58	2.4		
	1/2 (15A)	15	**VXZ2B5**				130	5.3		750
	3/4 (20A)	20	**VXZ2C5**				220	9.2		1150
	1 (25A)	25	**VXZ2D5**				245	10.2		1350

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. (Refer to page 21.)
Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.
Note 3) Refer to “Glossary of Terms” on page 28 for details on the maximum operating pressure differential and the maximum system pressure.

Fluid and Ambient Temperature

Fluid temperature [°C]	Ambient temperature [°C]
1 to 99	–20 to 60

Note) With no freezing

Valve Leakage Rate

Internal Leakage

Seal material	Leakage rate (Water) Note)
EPDM	0.1 cm^3/min or less

External Leakage

Seal material	Leakage rate (Water) Note)
EPDM	0.1 cm^3/min or less

Note) Leakage is the value at ambient temperature 20 °C.

How to Order (Single Unit)

VXZ2 [3] [5] [A] [A] [A] [ ]

Common Specifications

Seal material	EPDM

Fluid

5	For Heated water

With bracket

—	No
XB	Yes

* The bracket is shipped together with the product, but not assembled.

Size/Valve type / **Body material/Port size/Orifice diameter**

Symbol	Body size	Valve type	Symbol	Body material	Port size	Orifice diameter
3	10A	N.C.	A	C37 (Brass)	1/4	10
A		N.O.	B		3/8	
			C	Stainless steel	1/4	
			D		3/8	
4	15A	N.C.	F	C37 (Brass)	1/2	15
B		N.O.	G	Stainless steel		
5	20A	N.C.	H	C37 (Brass)	3/4	20
C		N.O.	J	Stainless steel		
6	25A	N.C.	K	C37 (Brass)	1	25
D		N.O.	L	Stainless steel		

Other options

Symbol	Oil-free	Port thread
—	—	Rc
A	—	G
B		NPT
D	□	G
E		NPT
Z	□	Rc

For other special options, refer to page 19.
Special electrical entry direction

Voltage/Electrical entry (coil insulation type: Class H)

Symbol	Voltage	Electrical entry Note 3)
A	24 VDC	Grommet
B	100 VAC	Grommet (With surge voltage suppressor)
C	110 VAC	
D	200 VAC	
E	230 VAC	
G	24 VDC	DIN terminal Note 1) 2) (With surge voltage suppressor)
H	100 VAC	
J	110 VAC	
K	200 VAC	
L	230 VAC	
N	100 VAC	Conduit terminal (With surge voltage suppressor)
P	110 VAC	
Q	200 VAC	
R	230 VAC	
T	100 VAC	Conduit (With surge voltage suppressor)
U	110 VAC	
V	200 VAC	
W	230 VAC	
Z1A	48 VAC	Grommet (With surge voltage suppressor)
Z1B	220 VAC	
Z1C	240 VAC	
Z1U	24 VAC	
Z1F	48 VAC	DIN terminal Note 1) 2) (With surge voltage suppressor)
Z1G	220 VAC	
Z1H	240 VAC	
Z1V	24 VAC	
Z1K	48 VAC	Conduit terminal (With surge voltage suppressor)
Z1L	220 VAC	
Z1M	240 VAC	
Z1W	24 VAC	

Symbol	Voltage	Electrical entry Note 3)
Z1P	48 VAC	Conduit (With surge voltage suppressor)
Z1Q	220 VAC	
Z1R	240 VAC	
Z1Y	24 VAC	
Z2A	24 VDC	DIN terminal Note 1) 2) (With surge voltage suppressor, with light)
Z2B	100 VAC	
Z2C	110 VAC	
Z2D	200 VAC	
Z2E	230 VAC	
Z2F	48 VAC	
Z2G	220 VAC	
Z2H	240 VAC	
Z2V	24 VAC	
Z2K	24 VDC	Conduit terminal (With surge voltage suppressor, with light)
Z2L	100 VAC	
Z2M	110 VAC	
Z2N	200 VAC	
Z2P	230 VAC	
Z2Q	48 VAC	
Z2R	220 VAC	
Z2S	240 VAC	
Z2W	24 VAC	

Note 1) AC voltage coil for "H" of DIN terminal type does not have full-wave rectifier.
Full-wave rectifier is built on the DIN connector side. Please refer to page 27 to order it as an accessory.
Note 2) DIN connector insulation class is Class "B".
Note 3) Faston terminal is not available.

Dimensions → Page 26 and after

For High Temperature Oil

∗ Can be used with air (up to 99 °C), water (up to 99 °C) and oil.
Note that the maximum operating pressure differential and flow-rate characteristics should be within the specifications of the fluid used.


⚠When the fluid is oil.

The kinematic viscosity must not exceed 50 mm²/s. The special construction of the armature adopted in the built-in full-wave rectifier type gives an improvement in OFF response by providing clearance on the absorbed surface when it is switched ON.


Flow-rate Characteristics

N.C.

Symbol

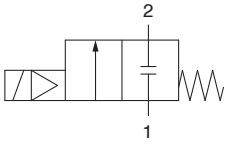

When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.

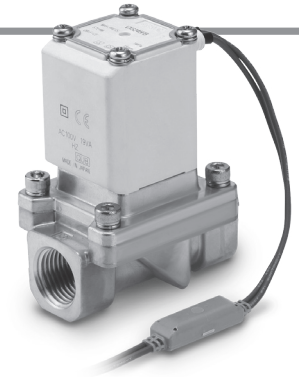

Normally Closed (N.C.)

Body material	Port size (Nominal diameter)	Orifice diameter [mmØ]	Model	Min. operating pressure differential Note 1) [MPa]	Max. operating pressure differential [MPa] Note 3)		Flow-rate characteristics		Max. system pressure Note 3) [MPa]	Weight Note 2) [g]
					AC	DC	Av x 10^{-6} m^2	Cv		
C37 (Brass), Stainless steel	1/4 (8A)	10	**VXZ236**	0	0.7		46	1.9	1.5	600
	3/8 (10A)						58	2.4		
	1/2 (15A)	15	**VXZ246**				130	5.3		720
	3/4 (20A)	20	**VXZ256**				220	9.2		1100
	1 (25A)	25	**VXZ266**				245	10.2		1300

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. (Refer to page 21.)
Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.
Note 3) Refer to “Glossary of Terms” on page 28 for details on the maximum operating pressure differential and the maximum system pressure.

Fluid and Ambient Temperature

Fluid temperature [°C]	Ambient temperature [°C]
–5 Note) to 100	–20 to 60

Note) Kinematic viscosity: 50 mm²/s or less

Valve Leakage Rate

Internal Leakage

Seal material	Leakage rate (Oil) Note)
FKM	0.1 cm³/min or less

External Leakage


Seal material	Leakage rate (Oil) Note)
FKM	0.1 cm³/min or less

Note) Leakage is the value at ambient temperature 20 °C.

Flow-rate Characteristics

N.O.

Symbol

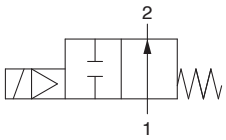

When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.



Normally Open (N.O.)

Body material	Port size (Nominal diameter)	Orifice diameter [mmØ]	Model	Min. operating pressure differential Note 1) [MPa]	Max. operating pressure differential [MPa] Note 3)		Flow-rate characteristics		Max. system pressure Note 3) [MPa]	Weight Note 2) [g]
					AC	DC	Av x 10^{-6} m^2	Cv		
C37 (Brass), Stainless steel	1/4 (8A)	10	**VXZ2A6**	0	0.7	0.6	46	1.9	1.5	630
	3/8 (10A)						58	2.4		
	1/2 (15A)	15	**VXZ2B6**				130	5.3		750
	3/4 (20A)	20	**VXZ2C6**				220	9.2		1150
	1 (25A)	25	**VXZ2D6**				245	10.2		1350

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. (Refer to page 21.)
Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.
Note 3) Refer to “Glossary of Terms” on page 28 for details on the maximum operating pressure differential and the maximum system pressure.

Fluid and Ambient Temperature

Fluid temperature [°C]	Ambient temperature [°C]
–5 Note) to 100	–20 to 60

Note) Kinematic viscosity: 50 mm^2/s or less

Valve Leakage Rate

Internal Leakage

Seal material	Leakage rate (Oil) Note)
FKM	0.1 cm^3/min or less

External Leakage

Seal material	Leakage rate (Oil) Note)
FKM	0.1 cm^3/min or less

Note) Leakage is the value at ambient temperature 20 °C.

How to Order (Single Unit)

VXZ2 [3] [6] [A] [A] [A] [ ]

Common Specifications

Seal material	FKM

Fluid

6	For High temperature oil

With bracket

—	No
XB	Yes

* The bracket is shipped together with the product, but not assembled.

Size/Valve type

Symbol	Body size	Valve type
3	10A	N.C.
A		N.O.
4	15A	N.C.
B		N.O.
5	20A	N.C.
C		N.O.
6	25A	N.C.
D		N.O.

Body material/Port size/Orifice diameter

Symbol	Body material	Port size	Orifice diameter
A	C37 (Brass)	1/4	10
B		3/8	
C	Stainless steel	1/4	
D		3/8	
F	C37 (Brass)	1/2	15
G	Stainless steel		
H	C37 (Brass)	3/4	20
J	Stainless steel		
K	C37 (Brass)	1	25
L	Stainless steel		

Other options

Symbol	Oil-free	Port thread
—	—	Rc
A	—	G
B		NPT
D	□	G
E		NPT
Z	□	Rc

For other special options, refer to page 19.
Special electrical entry direction

Voltage/Electrical entry (coil insulation type: Class H)

Symbol	Voltage	Electrical entry Note 3)
A	24 VDC	Grommet
B	100 VAC	Grommet (With surge voltage suppressor)
C	110 VAC	
D	200 VAC	
E	230 VAC	
G	24 VDC	DIN terminal Note 1) 2) (With surge voltage suppressor)
H	100 VAC	
J	110 VAC	
K	200 VAC	
L	230 VAC	
N	100 VAC	Conduit terminal (With surge voltage suppressor)
P	110 VAC	
Q	200 VAC	
R	230 VAC	
T	100 VAC	Conduit (With surge voltage suppressor)
U	110 VAC	
V	200 VAC	
W	230 VAC	
Z1A	48 VAC	Grommet (With surge voltage suppressor)
Z1B	220 VAC	
Z1C	240 VAC	
Z1U	24 VAC	
Z1F	48 VAC	DIN terminal Note 1) 2) (With surge voltage suppressor)
Z1G	220 VAC	
Z1H	240 VAC	
Z1V	24 VAC	
Z1K	48 VAC	Conduit terminal (With surge voltage suppressor)
Z1L	220 VAC	
Z1M	240 VAC	
Z1W	24 VAC	

Symbol	Voltage	Electrical entry Note 3)
Z1P	48 VAC	Conduit (With surge voltage suppressor)
Z1Q	220 VAC	
Z1R	240 VAC	
Z1Y	24 VAC	
Z2A	24 VDC	DIN terminal Note 1) 2) (With surge voltage suppressor, with light)
Z2B	100 VAC	
Z2C	110 VAC	
Z2D	200 VAC	
Z2E	230 VAC	
Z2F	48 VAC	
Z2G	220 VAC	
Z2H	240 VAC	
Z2V	24 VAC	
Z2K	24 VDC	Conduit terminal (With surge voltage suppressor, with light)
Z2L	100 VAC	
Z2M	110 VAC	
Z2N	200 VAC	
Z2P	230 VAC	
Z2Q	48 VAC	
Z2R	220 VAC	
Z2S	240 VAC	
Z2W	24 VAC	

Note 1) AC voltage coil for "H" of DIN terminal type does not have full-wave rectifier.
Full-wave rectifier is built on the DIN connector side. Please refer to page 27 to order it as an accessory.
Note 2) DIN connector insulation class is Class "B".
Note 3) Faston terminal is not available.

Dimensions → Page 26 and after

EPDM specification

VXZ □□□□X332□

Enter standard product number.

EPDM specification

Coil mounting direction

Symbol	Specifications	
	Electrical entry direction	Bracket
—	IN side (Standard)	None
A	90°	
B	180°	
C	270°	
D	IN side (Standard)	With bracket *1
E	90°	
F	180°	
G	270°	

*1 Resin body is not available.

*2 Available for air and water.

*3 "Other options", which can be combined, are —, A, B, D, E, Z.

Special electrical entry direction

VXZ2□□□□XC A

Enter standard product number.

Symbol	Bracket
XC	Without bracket
XB*	With bracket

Symbol	Rotation angle
A	90° 90° IN OUT
B	180° 180° IN OUT
C	270° 270° IN OUT

*1 Bracket is attached as standard with the resin body type (VXZ2$^{3}_{A}$0$^{C}_{D}$$_{E}$□), so it is no necessary to add XB to the part number.

*2 Bracket is packed in the same container as the main body.

* Enter symbols in the order below when ordering a combination of electrical option, other option, etc.

Example) **VXZ2 3 2 A Z 1A Z XB A**

Electrical option

Other option


Special electrical entry direction

With bracket

Series VXZ
Construction

Normally Closed (N.C.)


Body material: Aluminium, C37 (Brass), Stainless steel

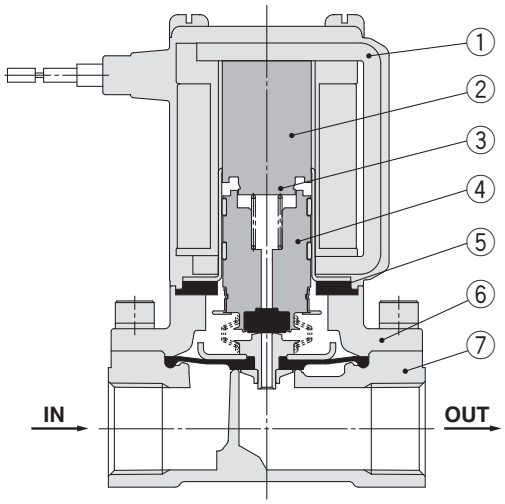

Component Parts

No.	Description	Material
1	**Solenoid coil**	Cu + Fe + Resin
2	**Tube assembly**	Stainless steel
3	**Return spring**	Stainless steel
4	**Armature/Diaphragm assembly**	Stainless steel, NBR, FKM, EPDM
5	**Stopper**	NBR, FKM, EPDM
6	**Bonnet**	Aluminium, C37 (Brass), Stainless steel
7	**Body**	Aluminium, C37 (Brass), Stainless steel

Body material: Resin

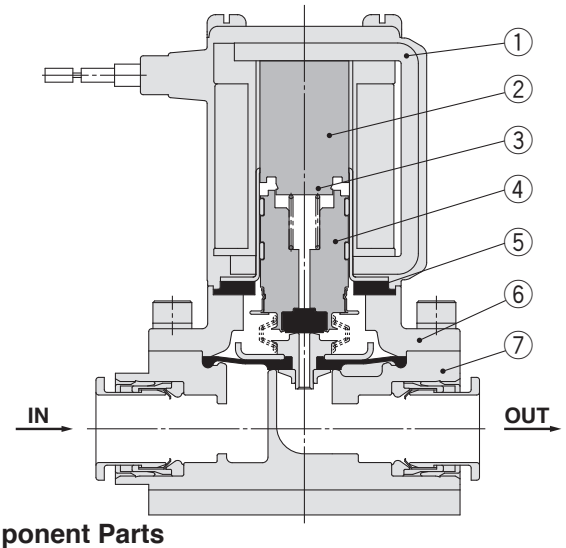


Component Parts

No.	Description	Material
1	**Solenoid coil**	Cu + Fe + Resin
2	**Tube assembly**	Stainless steel
3	**Return spring**	Stainless steel
4	**Armature/Diaphragm assembly**	Stainless steel, NBR, FKM
5	**Stopper**	NBR, FKM
6	**Bonnet**	Aluminium
7	**Body**	Resin (PBT)

Normally Open (N.O.)


Body material: Aluminium, C37 (Brass), Stainless steel

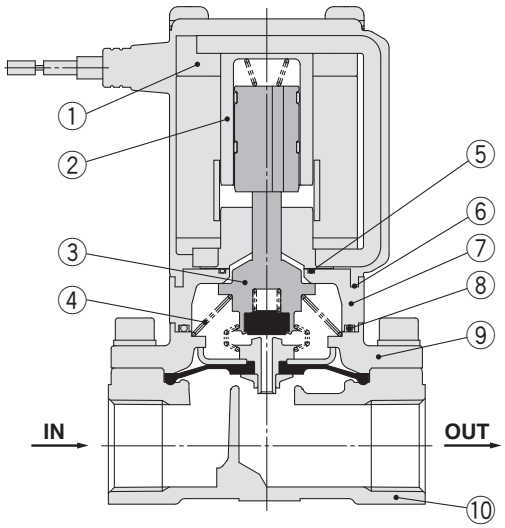

Component Parts

No.	Description	Material
1	**Solenoid coil**	Cu + Fe + Resin
2	**Sleeve assembly**	Stainless steel, Resin (PPS)
3	**Push rod/Diaphragm assembly**	Stainless steel, NBR, FKM, EPDM
4	**Spring**	Stainless steel
5	**O-ring A**	NBR, FKM, EPDM
6	**O-ring B**	NBR, FKM, EPDM
7	**Adapter**	Resin (PPS)
8	**O-ring C**	NBR, FKM, EPDM
9	**Bonnet**	Aluminium, C37 (Brass), Stainless steel
10	**Body**	Aluminium, C37 (Brass), Stainless steel

Body material: Resin

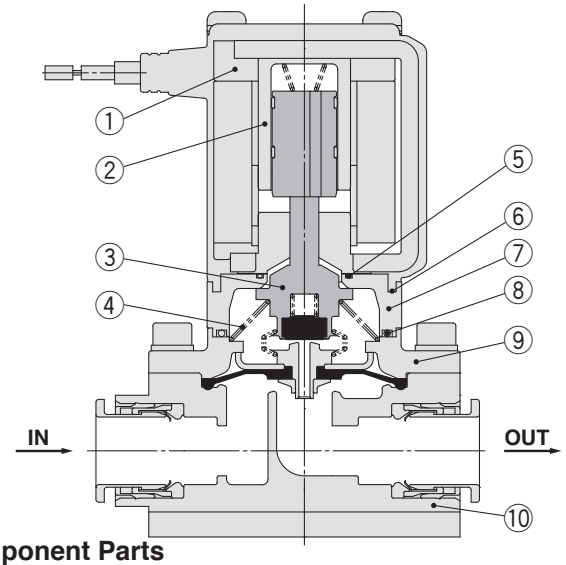


Component Parts

No.	Description	Material
1	**Solenoid coil**	Cu + Fe + Resin
2	**Sleeve assembly**	Stainless steel, Resin (PPS)
3	**Push rod/Diaphragm assembly**	Stainless steel, NBR, FKM
4	**Spring**	Stainless steel
5	**O-ring A**	NBR, FKM
6	**O-ring B**	NBR, FKM
7	**Adapter**	Resin (PPS)
8	**O-ring C**	NBR, FKM
9	**Bonnet**	Aluminium
10	**Body**	Resin (PBT)

Working Principle


De-energized

The fluid enters from the IN goes through the supply orifice to fill the pressure action chamber. Main valve is closed by the pressure in the pressure action chamber and the reaction force of the return spring.

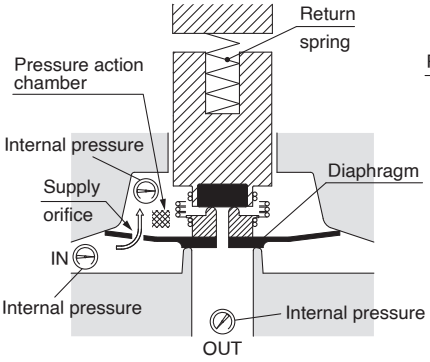


Right after energized (Pilot valve open)

When the coil is energized, the armature is attracted causing the pilot orifice to opening. The fluid filling the pressure action chamber flows to the OUT side through the pilot orifice.

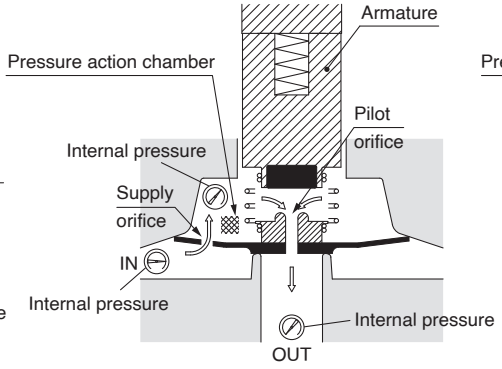

Energized (Main valve side)

The pressure in the pressure action chamber decreases by discharging fluid through the pilot orifice. Because the force which pushes down the valve is reduced by the discharge of the fluid, the force that pushes up the main valve overcomes the push down force and opens the main valve. The main valve opens by the lift spring reaction force even if pressure on the IN side is 0 MPa or very low pressure.

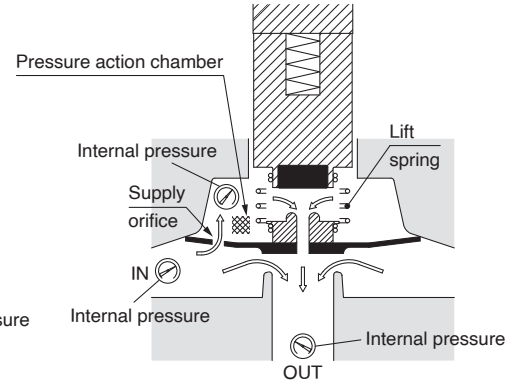


⚠Warning


Unstable flow may occur with the product under the following conditions: • low flow from the pump or compressor, etc. • use of several elbows or tees in the circuit, or • thin nozzles installed at the end of the piping etc. This can cause valve opening/closing failure, or oscillation, and cause a valve malfunction. If products are used with vacuum, then the vacuum level can be unstable due to these conditions.

Dimensions/Body Material: Resin (One-touch Fitting Type)


Grommet

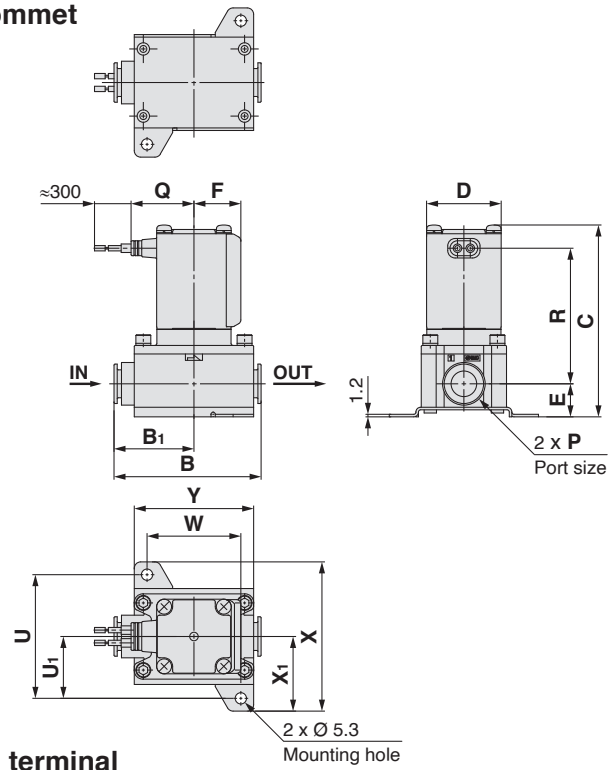


Grommet (with surge voltage suppressor)

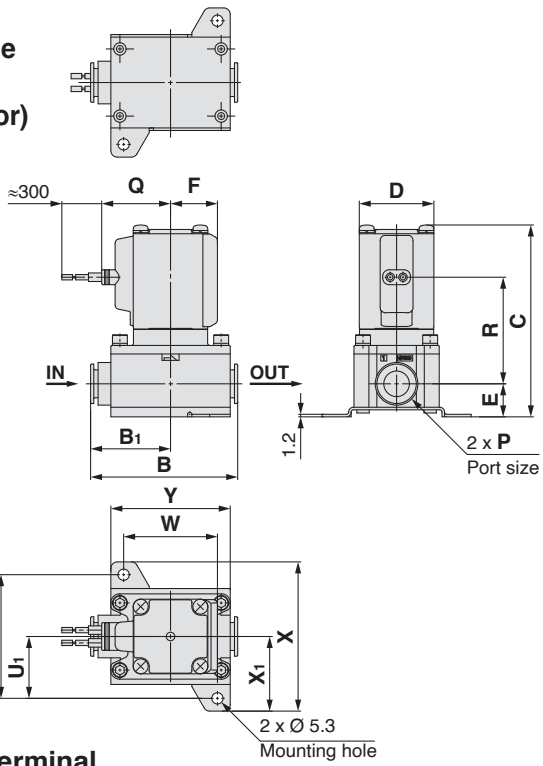

DIN terminal

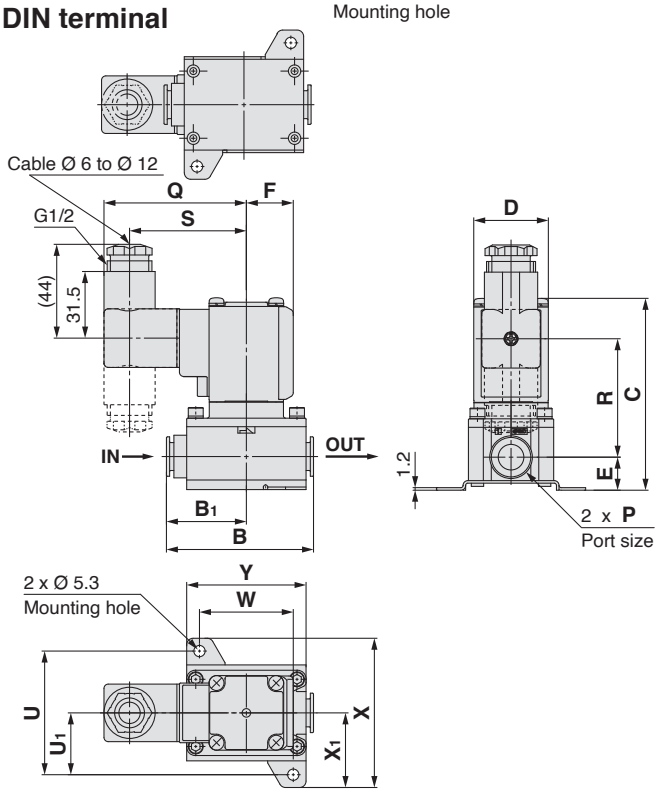

Conduit terminal

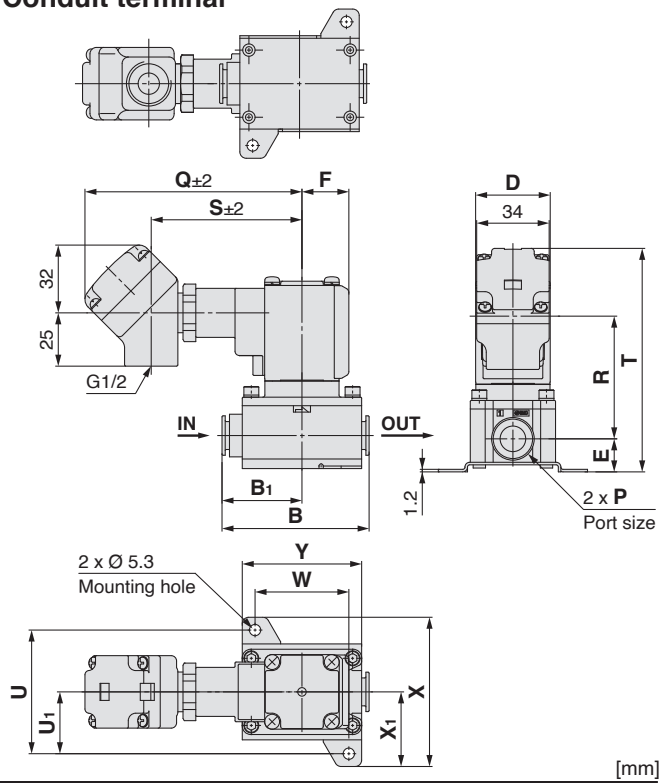

[mm]

Model	One-touch fitting P	B	B1	C	D	E	F	Bracket mounting					
								U	U1	W	X	X1	Y
VXZ2$^{3}_{A}$	Ø 10, Ø 3/8", Ø 12	69	37.5	90 (96.5)	35	15.5	22	54	27	44	65	32.5	56


Model	One-touch fitting P	Electrical entry										
		Grommet		Grommet (with surge voltage suppressor)		DIN terminal			Conduit terminal			
		Q	R	Q	R	Q	R	S	Q	R	S	T
VXZ2$^{3}_{A}$	Ø10, Ø 3/8", Ø 12	29.5	63.5 (70)	32.5	50 (56.5)	67	55.5 (62)	55	102	57.5 (64)	71	105 (111.5)

( ) are the dimensions of Normally Open (N.O.).


For information on handling One-touch fittings and on appropriate tubing, refer to page 38 and the Fittings & Tubing section of the "Handling Precautions for SMC Products" on http://www.smc.eu

Dimensions/Body Material: Resin (One-touch Fitting Type)

Conduit

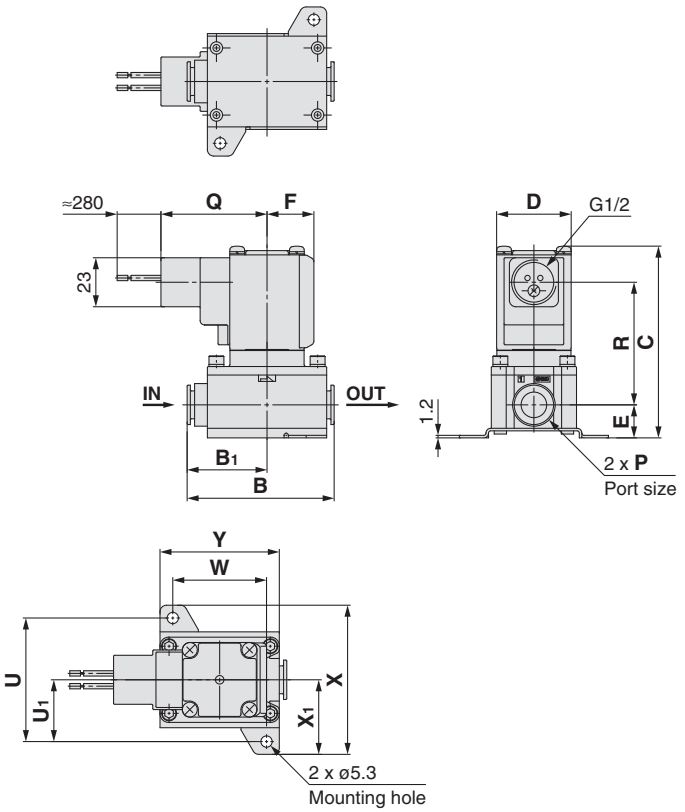

Faston type

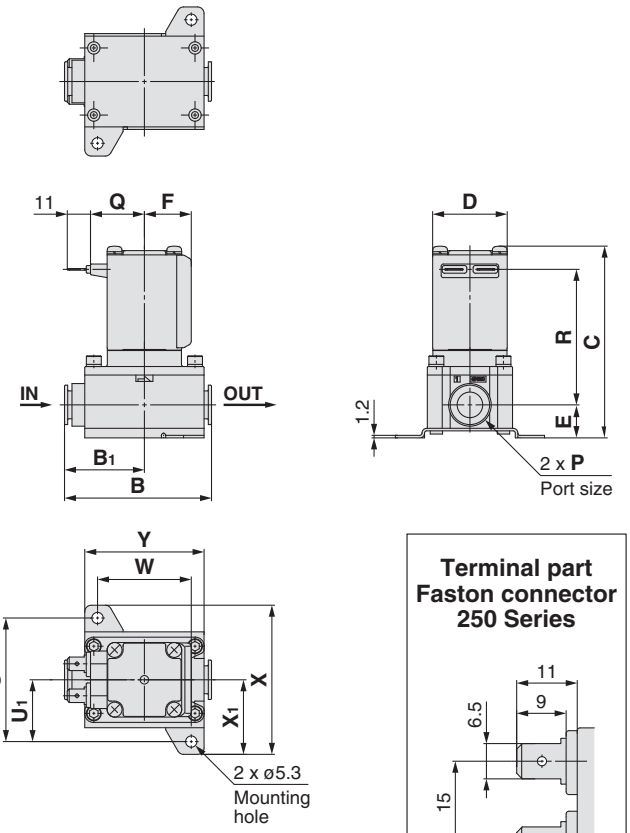

Terminal part
Faston connector
250 Series

[mm]


Model	One-touch fitting P	B	B_1	C	D	E	F	Bracket mounting					
								U	U_1	W	X	X_1	Y
VXZ2$^{3}_{A}$	ø10, ø3/8", ø12	69	37.5	90 (96.5)	35	15.5	22	54	27	44	65	32.5	56

Model	One-touch fitting P	Electrical entry			
		Conduit		Faston	
		Q	R	Q	R
VXZ2$^{3}_{A}$	ø10, ø3/8", ø12	50	57.5 (64)	25.5	63.5 (70)


( ) are the dimensions of Normally Open (N.O.).

Dimensions/Body Material: Aluminium, C37 (Brass), Stainless Steel


Grommet

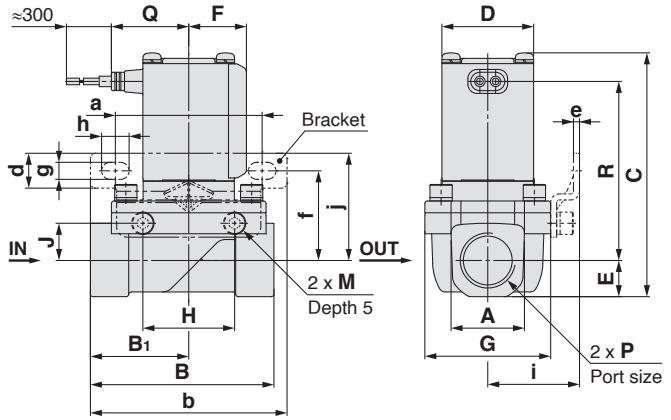


Grommet (with surge voltage suppressor)

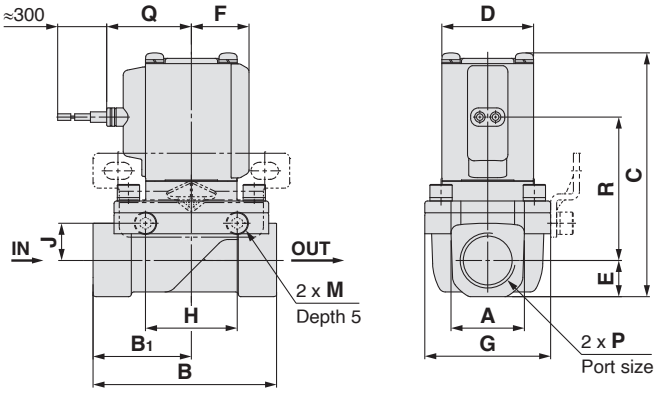

DIN terminal

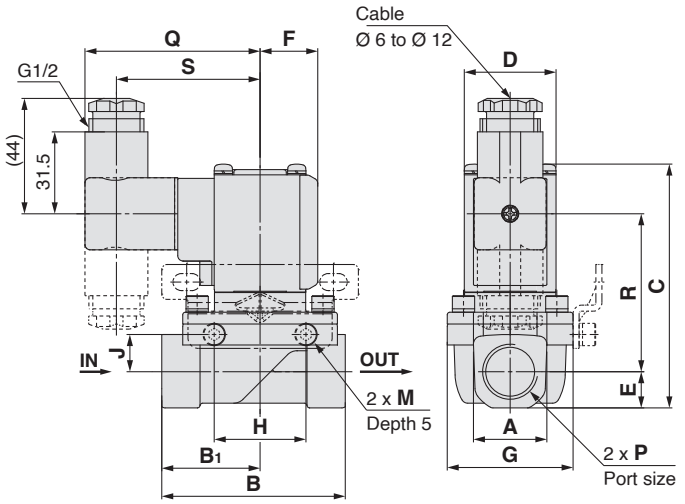

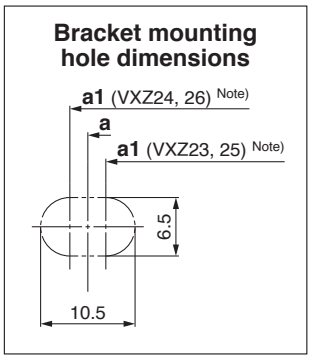

[mm]

Model	Port size P	A	B	B_1	C	D	E	F	G	H	J	M
VXZ2$^{3}_{A}$	1/4, 3/8	21 <22>	57	28.5	85 (91.5)	35	10.5	22	40	35	10	M5
VXZ2$^{4}_{B}$	1/2	28	70	37.5	93 (99.5)	35	14	22	48	35	14.2	M5
VXZ2$^{5}_{C}$	3/4	33.5	71	38.5	104 (110.5)	40	17	24.5	62	33	15.2	M6
VXZ2$^{6}_{D}$	1	42	95	49.5	110 (116)	40	20	24.5	66	37	17.2	M6


Model	Port size P	Bracket mounting									
		a	a1 Note)	b	d	e	f	g	h	i	j
VXZ2$^{3}_{A}$	1/4, 3/8	56	52	75	13.5	2.3	30	6.5	10.5	31	37
VXZ2$^{4}_{B}$	1/2	56	60	75		2.3	34.5	6.5	10.5	35	41
VXZ2$^{5}_{C}$	3/4	70.5	68	92		2.3	39	6.5	10.5	43	46
VXZ2$^{6}_{D}$	1	70.5	73	92		2.3	41	6.5	10.5	45	48

Model	Port size P	Electrical entry						
		Grommet		Grommet (with surge voltage suppressor)		DIN terminal		
		Q	R	Q	R	Q	R	S
VXZ2$^{3}_{A}$	1/4, 3/8	29.5	63.5 (70)	32.5	50 (56.5)	67	55.5 (62)	55
VXZ2$^{4}_{B}$	1/2	29.5	68.5 (74.5)	32.5	55 (61)	67	60.5 (66.5)	55
VXZ2$^{5}_{C}$	3/4	32	76.5 (83)	35	63 (69.5)	69.5	68.5 (75)	57.5
VXZ2$^{6}_{D}$	1	32	79.5 (85)	35	66 (71.5)	69.5	71.5 (77)	57.5


( ) are the dimensions of Normally Open (N.O.). < > are the dimensions of aluminum body.
Note) Old VXZ bracket mounting hole center position

Dimensions/Body Material: Aluminium, C37 (Brass), Stainless Steel


Conduit terminal

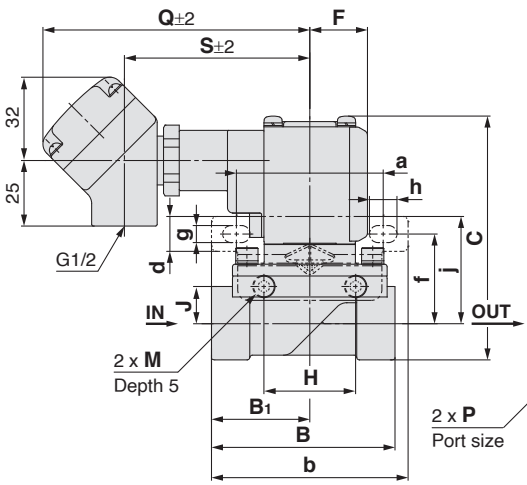


Conduit

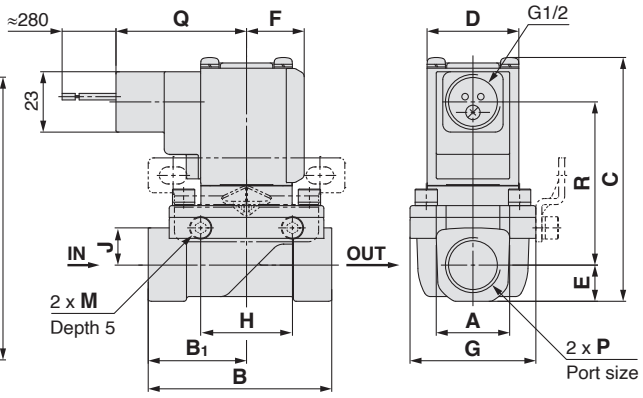


Faston type

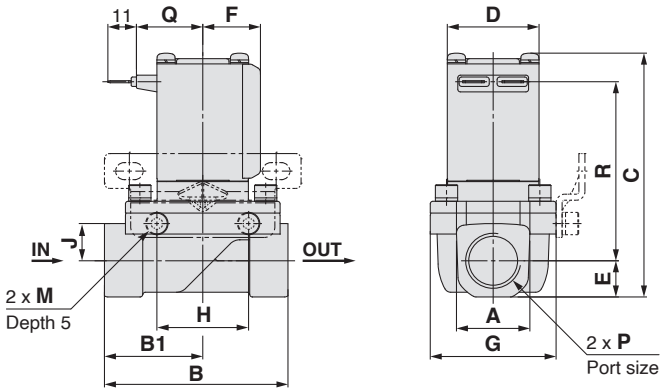

Terminal part Faston connector 250 Series

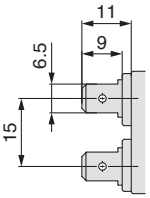

Bracket mounting hole dimensions

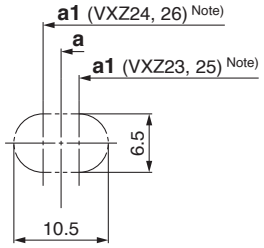

[mm]

Model	Port size P	A	B	B_1	C	D	E	F	G	H	J	M
VXZ2$^{3}_{A}$	1/4, 3/8	21 <22>	57	28.5	85 (91.5)	35	10.5	22	40	35	10	M5
VXZ2$^{4}_{B}$	1/2	28	70	37.5	93 (99.5)	35	14	22	48	35	14.2	M5
VXZ2$^{5}_{C}$	3/4	33.5	71	38.5	104 (110.5)	40	17	24.5	62	33	15.2	M6
VXZ2$^{6}_{D}$	1	42	95	49.5	110 (116)	40	20	24.5	66	37	17.2	M6

Model	Port size P	Bracket mounting									
		a	a1 Note)	b	d	e	f	g	h	i	j
VXZ2$^{3}_{A}$	1/4, 3/8	56	52	75	13.5	2.3	30	6.5	10.5	31	37
VXZ2$^{4}_{B}$	1/2	56	60	75		2.3	34.5	6.5	10.5	35	41
VXZ2$^{5}_{C}$	3/4	70.5	68	92		2.3	39	6.5	10.5	43	46
VXZ2$^{6}_{D}$	1	70.5	73	92		2.3	41	6.5	10.5	45	48


Model	Port size P	Electrical entry							
		Conduit terminal				Conduit		Faston	
		Q	R	S	T	Q	R	Q	R
VXZ2$^{3}_{A}$	1/4, 3/8	102	57.5 (64)	71	100 (106.5)	50	57.5 (64)	25.5	63.5 (70)
VXZ2$^{4}_{B}$	1/2	102	62.5 (68.5)	71	108 (114.5)	50	62.5 (68.5)	25.5	68.5 (74.5)
VXZ2$^{5}_{C}$	3/4	104.5	70.5 (77)	73.5	119 (126)	52.5	70.5 (77)	28	76.5 (82.5)
VXZ2$^{6}_{D}$	1	104.5	73.5 (79)	73.5	125 (131)	52.5	73.5 (79)	28	79.5 (85)

( ) are the dimensions of Normally Open (N.O.). < > are the dimensions of aluminum body.
Note) Old VXZ bracket mounting hole center position


For Heated Water, High Temperature Oil

Dimensions/Body Material: C37 (Brass), Stainless Steel


Grommet

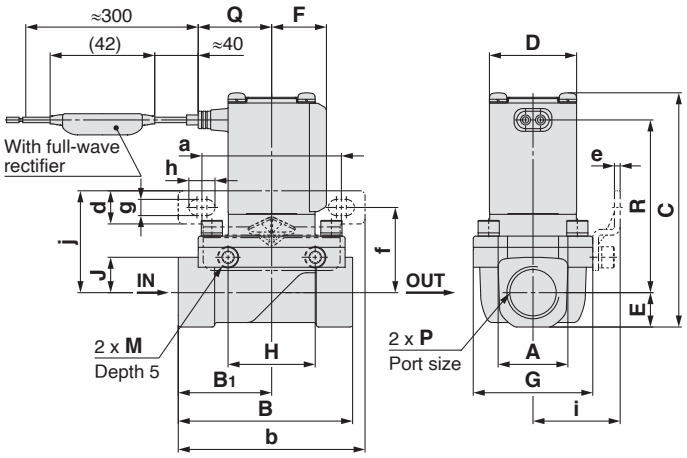


Conduit terminal

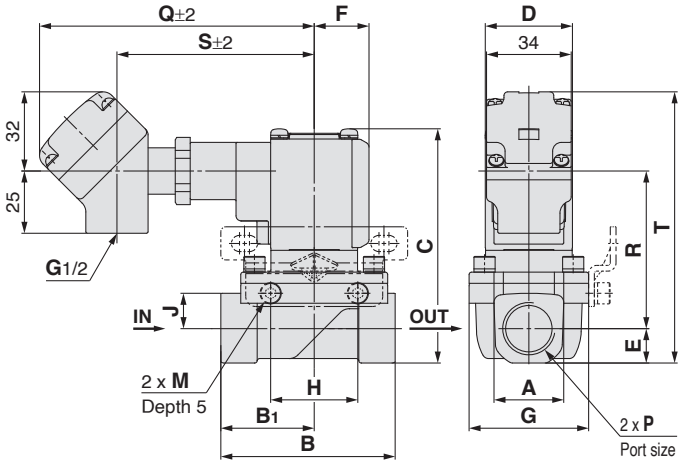

Conduit

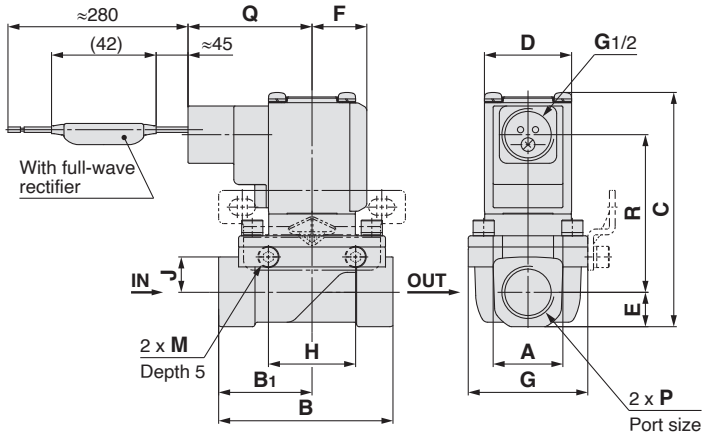

DIN terminal

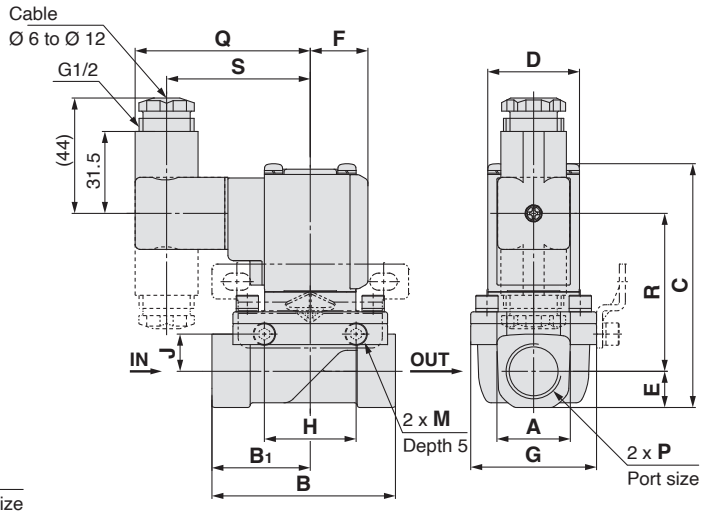


[mm]

Model	Port size P	A	B	B1	C	D	E	F	G	H	J	M
VXZ2$^{3}_{A}$	1/4, 3/8	21	57	28.5	85 (91.5)	35	10.5	22	40	35	10	M5
VXZ2$^{4}_{B}$	1/2	28	70	37.5	93 (99.5)	35	14	22	48	35	14.2	M5
VXZ2$^{5}_{C}$	3/4	33.5	71	38.5	104 (110.5)	40	17	24.5	62	33	15.2	M6
VXZ2$^{6}_{D}$	1	42	95	49.5	110 (116)	40	20	24.5	66	37	17.2	M6

Model	Port size P	Bracket mounting									
		a	a1 Note)	b	d	e	f	g	h	i	j
VXZ2$^{3}_{A}$	1/4, 3/8	56	52	75	13.5	2.3	30	6.5	10.5	31	37
VXZ2$^{4}_{B}$	1/2	56	60	75		2.3	34.5	6.5	10.5	35	41
VXZ2$^{5}_{C}$	3/4	70.5	68	92		2.3	39	6.5	10.5	43	46
VXZ2$^{6}_{D}$	1	70.5	73	92		2.3	41	6.5	10.5	45	48

Bracket mounting hole dimensions

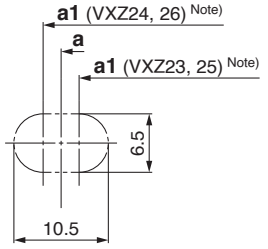


Model	Port size P	Electrical entry										
		Grommet		Conduit terminal				Conduit		DIN terminal		
		Q	R	Q	R	S	T	Q	R	Q	R	S
VXZ2$^{3}_{A}$	1/4, 3/8	29.5	63.5 (70)	110.5	57.5 (64)	79.5	100 (106.5)	50	57.5 (64)	67	55.5 (62)	55
VXZ2$^{4}_{B}$	1/2	29.5	68.5 (74.5)	110.5	62.5 (68.5)	79.5	108 (114.5)	50	62.5 (68.5)	67	60.5 (66.5)	55
VXZ2$^{5}_{C}$	3/4	32	76.5 (83)	113	70.5 (77)	82	119 (126)	52.5	70.5 (77)	69.5	68.5 (75)	57.5
VXZ2$^{6}_{D}$	1	32	79.5 (85)	113	73.5 (79)	82	125 (131)	52.5	73.5 (79)	69.5	71.5 (77)	57.5

( ) are the dimensions of Normally Open (N.O.).
Note) Old VXZ bracket mounting hole center position

Replacement Parts

¡DIN Connector Part No.

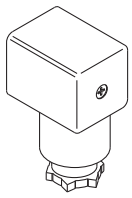

<Coil Insulation Type/For Class B>

Electrical option	Rated voltage	Connector part no.
None	24 VDC	**3G-GDM2A-G**
	12 VDC	
	100 VAC	
	110 VAC	
	200 VAC	
	220 VAC	
	230 VAC	
	240 VAC	
	24 VAC	
	48 VAC	
With light	24 VDC	**GDM2A-L5**
	12 VDC	**GDM2A-L6**
	100 VAC	**GDM2A-L1**
	110 VAC	**GDM2A-L1**
	200 VAC	**GDM2A-L2**
	220 VAC	**GDM2A-L2**
	230 VAC	**GDM2A-L2**
	240 VAC	**GDM2A-L2**
	24 VAC	**GDM2A-L5**
	48 VAC	**GDM2A-L15**

<Coil Insulation Type/For Class H>

Electrical option	Rated voltage	Connector part no.
None	24 VDC	**GDM2A-G-S2**
	100 VAC	**GDM2A-R**
	110 VAC	
	200 VAC	
	220 VAC	
	230 VAC	
	240 VAC	
	24 VAC	
	48 VAC	
With light	24 VDC	**GDM2A-G-Z5**
	100 VAC	**GDM2A-R-L1**
	110 VAC	**GDM2A-R-L1**
	200 VAC	**GDM2A-R-L2**
	220 VAC	**GDM2A-R-L2**
	230 VAC	**GDM2A-R-L2**
	240 VAC	**GDM2A-R-L2**
	24 VAC	**GDM2A-R-L5**
	48 VAC	**GDM2A-R-L5**

¡Gasket Part No. for DIN Connector

VCW20-1-29-1 (For Class B)
VCW20-1-29-1-F (For Class H)

¡Lead Wire Assembly for Faston Terminal (Set of 2 pcs.)

VX021S-1-16FB

¡Bracket Assembly Part No. (for Metal Body)

VXZ 3 0S − 14A − 1

3	For VXZ2 $^{4\,A}_{3\,B}$ □
5	For VXZ2 $^{6\,C}_{5\,D}$ □

∗ 2 mounting screws are shipped together with the bracket assembly.

Series VXZ
Glossary of Terms

Pressure Terminology

1. Maximum operating pressure differential

The maximum pressure differential (the difference between the inlet and outlet pressure) which is allowed for operation. When the outlet pressure is 0 MPa, this becomes the maximum operating pressure.

2. Minimum operating pressure differential

The minimum pressure differential (the difference between the inlet pressure and outlet pressure) required to keep the main valve fully opened.

3. Maximum system pressure

The maximum pressure that can be applied inside the pipelines (line pressure).
[The pressure differential of the solenoid valve portion must be less than the maximum operating pressure differential.]

4. Withstand pressure

The pressure in which the valve must be withstood without a drop in performance after holding for one minute under prescribed pressure and returning to the operating pressure range. [value under the prescribed conditions]

Electrical Terminology


1. Surge voltage

A high voltage which is momentarily generated by shutting off the power in the shut-off area.

2. Degree of protection

A degree defined in the "JIS C 0920: Waterproof test of electric machinery/appliance and the degree of protection against the intrusion of solid foreign objects."

Verify the degree of protection for each product.

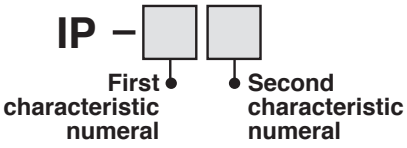

First Characteristics:
Degrees of protection against solid foreign objects

0	Non-protected
1	Protected against solid foreign objects of 50 mmØ and greater
2	Protected against solid foreign objects of 12 mmØ and greater
3	Protected against solid foreign objects of 2.5 mmØ and greater
4	Protected against solid foreign objects of 1.0 mmØ and greater
5	Dust-protected
6	Dust-tight

Electrical Terminology

Second Characteristics:
Degrees of protection against water

0	Non-protected	—
1	Protected against vertically falling water drops	Dripproof type 1
2	Protected against vertically falling water drops when enclosure tilted up to 15°	Dripproof type 2
3	Protected against rainfall when enclosure tilted up to 60°	Rainproof type
4	Protected against splashing water	Splashproof type
5	Protected against water jets	Water-jet-proof type
6	Protected against powerful water jets	Powerful water-jet-proof type
7	Protected against the effects of temporary immersion in water	Immersible type
8	Protected against the effects of continuous immersion in water	Submersible type

Example) IP65: Dust-tight, Water-jet-proof type

"Water-jet-proof type" means that no water intrudes inside an equipment that could hinder from operating normally by means of applying water for 3 minutes in the prescribed manner. Take appropriate protection measures, since a device is not usable in an environment where a droplet of water is splashed constantly.

Others

1. Material

NBR: Nitrile rubber
FKM: Fluoro rubber
EPDM: Ethylene propylene rubber

2. Oil-free treatment

The degreasing and washing of wetted parts

3. Symbol

When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.

Faston Terminal

1. Faston™ is a trademark of Tyco Electronics Corp.

2. For electrical connection of the Faston terminal and molded coil, please use Tyco's "Amp/Faston connector/250 Series" or the equivalent.

Solenoid Valve Flow-rate Characteristics
(How to indicate flow-rate characteristics)

1. Indication of flow-rate characteristics

The flow-rate characteristics in equipment such as a solenoid valve etc. are indicated in their specifications as shown in Table (1).

Table (1) Indication of Flow-rate Characteristics

Corresponding equipment	Indication by international standard	Other indications	Conformed standard
Pneumatic equipment	***C*, *b***	—	ISO 6358: 1989 JIS B 8390: 2000
	—	***S***	JIS B 8390: 2000 Equipment: JIS B 8373, 8374, 8375, 8379, 8381
		Cv	ANSI/(NFPA)T3.21.3: 1990
Process fluid control equipment	***Av***	—	IEC60534-2-3: 1997 JIS B 2005: 1995 Equipment: JIS B 8471, 8472, 8473
	—	***Cv***	

2. Pneumatic equipment

2.1 Indication according to the international standards

(1) Conformed standard

ISO 6358: 1989 : Pneumatic fluid power—Components using compressible fluids—Determination of flow-rate characteristics

JIS B 8390: 2000 : Pneumatic fluid power—Components using compressible fluids—How to test flow-rate characteristics

(2) Definition of flow-rate characteristics

The flow-rate characteristics are indicated as a result of a comparison between sonic conductance ***C*** and critical pressure ratio ***b***.

Sonic conductance ***C*** : Value which divides the passing mass flow rate of an equipment in a choked flow condition by the product of the upstream absolute pressure and the density in a standard condition.

Critical pressure ratio ***b*** : Pressure ratio (downstream pressure/upstream pressure) which will turn to a choked flow when the value is smaller than this ratio.

Choked flow : The flow in which the upstream pressure is higher than the downstream pressure and where sonic speed in a certain part of an equipment is reached.
Gaseous mass flow rate is in proportion to the upstream pressure and not dependent on the downstream pressure.

Subsonic flow : Flow greater than the critical pressure ratio

Standard condition : Air in a temperature state of 20 °C, absolute pressure 0.1 MPa (= 100 kPa = 1 bar), relative humidity 65%.
It is stipulated by adding the "(ANR)" after the unit depicting air volume.
(standard reference atmosphere)
Conformed standard: ISO 8778: 1990 Pneumatic fluid power—Standard reference atmosphere, JIS B 8393: 2000: Pneumatic fluid power—Standard reference atmosphere

(3) Formula for flow rate

It is described by the practical units as following.

When $\frac{P_2 + 0.1}{P_1 + 0.1} \leq b$, **choked flow**

$$Q = 600 \times C (P_1 + 0.1) \sqrt{\frac{293}{273 + t}} \quad \cdots\cdots (1)$$

When $\frac{P_2 + 0.1}{P_1 + 0.1} > b$, **subsonic flow**

$$Q = 600 \times C (P_1 + 0.1) \sqrt{1 - \left[\frac{\frac{P_2 + 0.1}{P_1 + 0.1} - b}{1 - b} \right]^2} \sqrt{\frac{293}{273 + t}} \quad \cdots\cdots (2)$$


Q : Air flow rate [dm³/min (ANR)], dm³ (Cubic decimetre) of SI unit are also allowed to be described by L (litre).
1 dm³ = 1 L

C : Sonic conductance [dm³/(s·bar)]
b : Critical pressure ratio [—]
P₁ : Upstream pressure [MPa]
P₂ : Downstream pressure [MPa]
t : Temperature [°C]
Note) Formula of subsonic flow is the elliptic analogous curve.
Flow-rate characteristics are shown in Graph (1) For details, please make use of SMC's "Energy Saving Program".

Example)
Obtain the air flow rate for P_1 = 0.4 [MPa], P_2 = 0.3 [MPa], t = 20 [°C] when a solenoid valve is performed in C = 2 [dm³/(s·bar)] and b = 0.3.

According to formula 1, the maximum flow rate = $600 \times 2 \times (0.4 + 0.1) \times \sqrt{\frac{293}{273 + 20}}$ = 600 [dm³/min (ANR)]

Pressure ratio = $\frac{0.3 + 0.1}{0.4 + 0.1}$ = 0.8
Based on Graph (1), the flow rate will be 0.7 when the pressure ratio is 0.8 and b = 0.3.
Hence, flow rate = Maximum flow rate x flow rate ratio = 600 x 0.7 = 420 [dm³/min (ANR)]

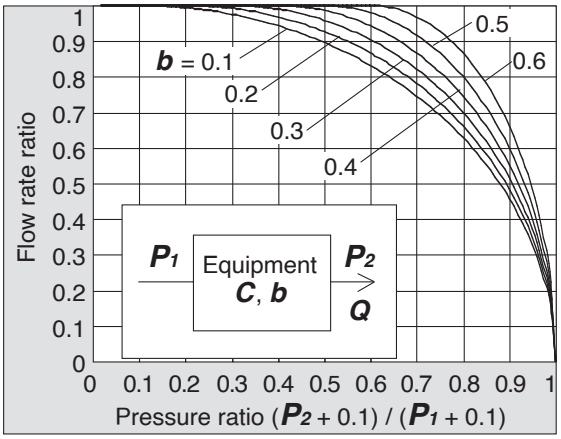

Graph (1) Flow-rate characteristics

(4) Test method
Attach a test equipment with the test circuit shown in Fig. (1) while maintaining the upstream pressure to a certain level which does not go below 0.3 MPa. Next, measure the maximum flow to be saturated in the first place, then measure this flow rate at 80 %, 60 %, 40 %, 20 % and the upstream and downstream pressure. And then, obtain the sonic conductance C from this maximum flow rate. Besides that, substitute each data of others for the subsonic flow formula to find b, then obtain the critical pressure ratio b from that average.

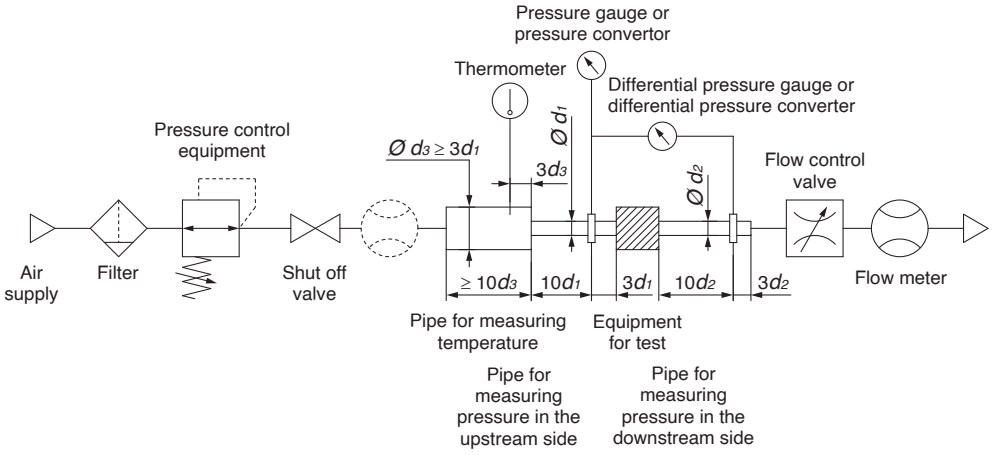


Fig. (1) Test circuit based on ISO 6358, JIS B 8390

2.2 Effective area *S*

(1) Conformed standard

JIS B 8390: 2000: Pneumatic fluid power—Components using compressible fluids—Determination of flow rate characteristics

Equipment standards: JIS B 8373: 2 port solenoid valve for pneumatics
JIS B 8374: 3 port solenoid valve for pneumatics
JIS B 8375: 4 port, 5 port solenoid valve for pneumatics
JIS B 8379: Silencer for pneumatics
JIS B 8381: Fittings of flexible joint for pneumatics

(2) Definition of flow-rate characteristics

Effective area ***S***: The cross-sectional area having an ideal throttle without friction deduced from the calculation of the pressure changes inside an air tank or without reduced flow when discharging the compressed air in a choked flow, from an equipment attached to the air tank. This is the same concept representing the "easy to run through" as sonic conductance ***C***.

(3) Formula for flow rate

When $\frac{P_2 + 0.1}{P_1 + 0.1} \leq 0.5$, **choked flow**

$$Q = 120 \times S\,(P_1 + 0.1)\sqrt{\frac{293}{273 + t}} \quad \cdots\cdots(3)$$

When $\frac{P_2 + 0.1}{P_1 + 0.1} > 0.5$, **subsonic flow**

$$Q = 240 \times S\,\sqrt{(P_2 + 0.1)\,(P_1 - P_2)}\sqrt{\frac{293}{273 + t}} \quad \cdots\cdots(4)$$

Conversion with sonic conductance ***C***:

$$S = 5.0 \times C \quad \cdots\cdots(5)$$

Q : Air flow rate[dm³/min(ANR)], dm³ (cubic decimetre) of SI unit are also allowed to be described by L (litre) 1 dm³ = 1 L
S : Effective area [mm²]
P_1 : Upstream pressure [MPa]
P_2 : Downstream pressure [MPa]
t : Temperature [°C]

Note) Formula for subsonic flow (4) is only applicable when the critical pressure ratio ***b*** is the unknown equipment. In the formula (2) by the sonic conductance ***C***, it is the same formula as when ***b*** = 0.5.

(4) Test method

Attach a test equipment with the test circuit shown in Fig. (2) in order to discharge air into the atmosphere until the pressure inside the air tank goes down to 0.25 MPa (0.2 MPa) from an air tank filled with the compressed air at a certain pressure level (0.5 MPa) which does not go below 0.6 MPa. At this time, measure the discharging time and the residual pressure inside the air tank which had been left until it turned to be the normal values to determine the effective area ***S***, using the following formula. The volume of an air tank should be selected within the specified range by corresponding to the effective area of an equipment for test. In the case of JIS B 8373, 8374, 8375, 8379, 8381, the pressure values are in parentheses and the coefficient of the formula is 12.9.

$$S = 12.1\,\frac{V}{t}\log_{10}\left(\frac{P_s + 0.1}{P + 0.1}\right)\sqrt{\frac{293}{T}} \quad \cdots\cdots(6)$$

S : Effective area [mm²]
V : Air tank capacity [dm³]
t : Discharging time [s]
P_s : Pressure inside air tank before discharging [MPa]
P : Residual pressure inside air tank after discharging [MPa]
T : Temperature inside air tank before discharging [K]

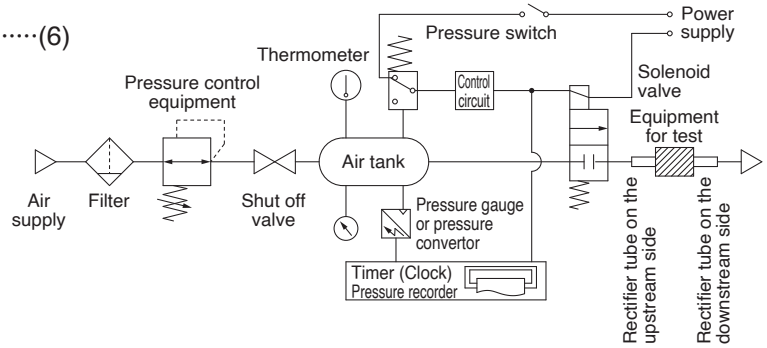


Fig. (2) Test circuit based on JIS B 8390

2.3 Flow coefficient *Cv* factor

The United States Standard ANSI/(NFPA)T3.21.3: 1990: Pneumatic fluid power—Flow rating test procedure and reporting method for fixed orifice components

Defines the ***Cv*** factor of flow coefficient by the following formula which is based on the test conducted by the test circuit analogous to ISO 6358.

$$Cv = \frac{Q}{114.5\sqrt{\frac{\Delta P\,(P_2 + P_a)}{T_1}}} \quad \cdots\cdots(7)$$

ΔP : Pressure drop between the static pressure tapping ports [bar]
P_1 : Pressure of the upstream tapping port [bar gauge]
P_2 : Pressure of the downstream tapping port [bar gauge]: $P_2 = P_1 - \Delta P$
Q : Flow rate [dm³/s standard condition]
P_a : Atmospheric pressure [bar absolute]
T_1 : Upstream absolute temperature [K]
Test conditions are < $P_1 + P_a$ = 6.5 ±0.2 bar absolute, T_1 = 297 ±5 K, 0.07 bar ≤ ΔP ≤ 0.14 bar.
This is the same concept as effective area A which ISO 6358 stipulates as being applicable only when the pressure drop is smaller than the upstream pressure and the compression of air does not become a problem.

3. Process fluid control equipment

(1) Conformed standard

IEC60534-2-3: 1997: Industrial process control valves. Part 2: Flow capacity, Section Three-Test procedures
JIS B 2005: 1995: Test method for the flow coefficient of a valve
Equipment standards: JIS B 8471: Solenoid valve for water
JIS B 8472: Solenoid valve for steam
JIS B 8473: Solenoid valve for fuel oil

(2) Definition of flow-rate characteristics

Av factor: Value of the clean water flow rate represented by m³/s which runs through a valve (equipment for test) when the pressure difference is 1 Pa. It is calculated using the following formula.

$$Av = Q\sqrt{\frac{\rho}{\Delta P}} \quad \cdots\cdots(8)$$

Av : Flow coefficient [m²]
Q : Flow rate [m³/s]
ΔP : Pressure difference [Pa]
ρ : Fluid density [kg/m³]

(3) Formula of flow rate

It is described by the practical units. Also, the flow-rate characteristics are shown in Graph (2).
In the case of liquid:

$$Q = 1.9 \times 10^6 Av\sqrt{\frac{\Delta P}{G}} \quad \cdots\cdots(9)$$

Q : Flow rate [L/min]
Av : Flow coefficient [m²]
ΔP : Pressure difference [MPa]
G : Relative density [water = 1]

In the case of saturated aqueous vapor:

$$Q = 8.3 \times 10^6 Av\sqrt{\Delta P(P_2 + 0.1)} \quad \cdots\cdots(10)$$

Q : Flow rate [kg/h]
Av : Flow coefficient [m²]
ΔP : Pressure difference [MPa]
P_1 : Upstream pressure [MPa]: $\Delta P = P_1 - P_2$
P_2 : Downstream pressure [MPa]

Conversion of flow coefficient:


$Av = 28 \times 10^{-6}\ Kv = 24 \times 10^{-6}\ Cv$ ·····(11)

Here,

Kv factor : Value of the clean water flow rate represented by m^3/h which runs through a valve at 5 to 40 °C, when the pressure difference is 1 bar.

Cv factor (Reference values): Figures representing the flow rate of clean water by US gal/min which runs through a valve at 60 °F, when the pressure difference is 1 lbf/in^2 (psi).

Value is different from ***Kv*** and ***Cv*** factors for pneumatic purpose due to different test method.

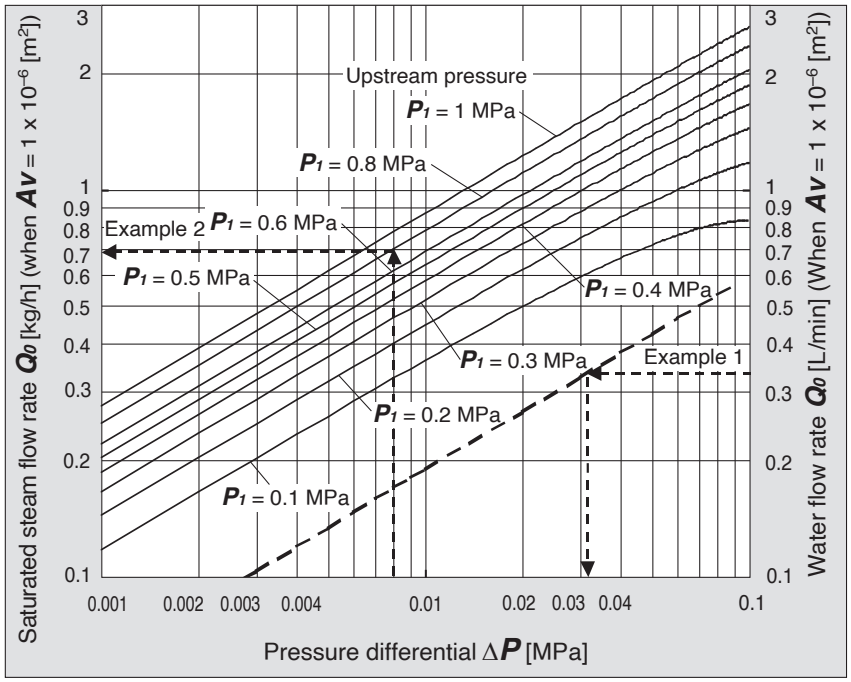

Graph (2) Flow-rate characteristics

Example 1)

Obtain the pressure difference when water 15 [L/min] runs through a solenoid valve with an $Av = 45 \times 10^{-6}$ [m^2].

Since $Q_0 = 15/45 = 0.33$ [L/min], according to Graph (2), if reading ΔP when Q_0 is 0.33, it will be 0.031 [MPa].

Example 2)

Obtain the saturated steam flow rate when $P_1 = 0.8$ [MPa], $\Delta P = 0.008$ [MPa] with a solenoid valve with an $Av = 1.5 \times 10^{-6}$ [m^2].

According to Graph (2), if reading Q_0 when P_1 is 0.8 and ΔP is 0.008, it is 0.7 [kg/h]. Hence, the flow rate

$Q = 0.7 \times 1.5 = 1.05$ [kg/h].

(4) Test method

Attach a test equipment with the test circuit shown in Fig. (3). Next, pour water at 5 to 40 °C, then measure the flow rate with a pressure difference of 0.075 MPa. However, the pressure difference needs to be set with a large enough difference so that the Reynolds number does not go below a range of 4×10^4 .


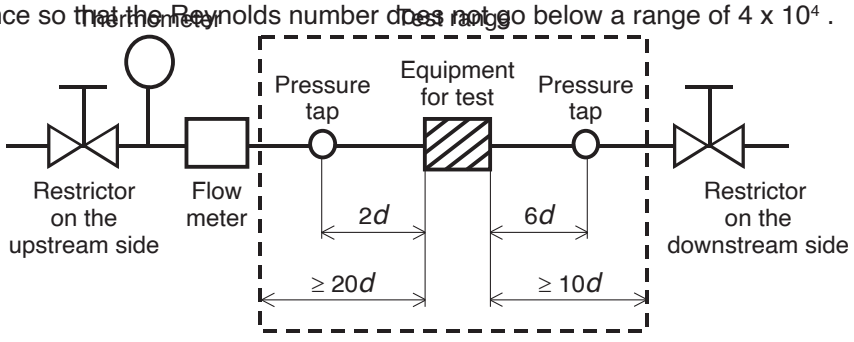


Fig. (3) Test circuit based on IEC60534-2-3, JIS B 2005

Flow-rate Characteristics

Note) Use this graph as a guide. In the case of obtaining an accurate flow rate, refer to pages 31 through to 35.

For Air

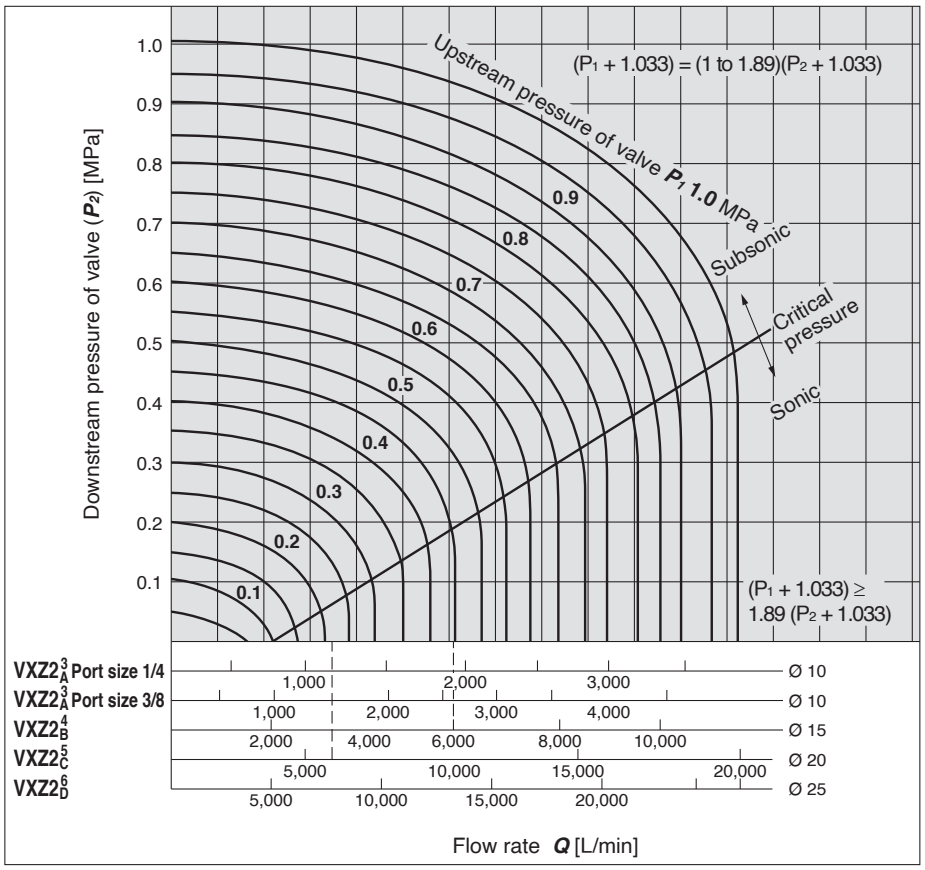


How to read the graph

The sonic range pressure to generate a flow of 6,000 L/min (ANR) is $P_1 \approx 0.47$ MPa for a Ø 15 orifice ($VXZ2^4_B$) and $P_1 \approx 0.23$ MPa for a Ø 20 orifice ($VXZ2^5_C$).

The optimum size for an upstream pressure P_1 = 0.45 MPa and a flow of 6,000 L/min will be the $VXZ2^4_B$ (Ø 15 orifice, port size 1/2).

For Water

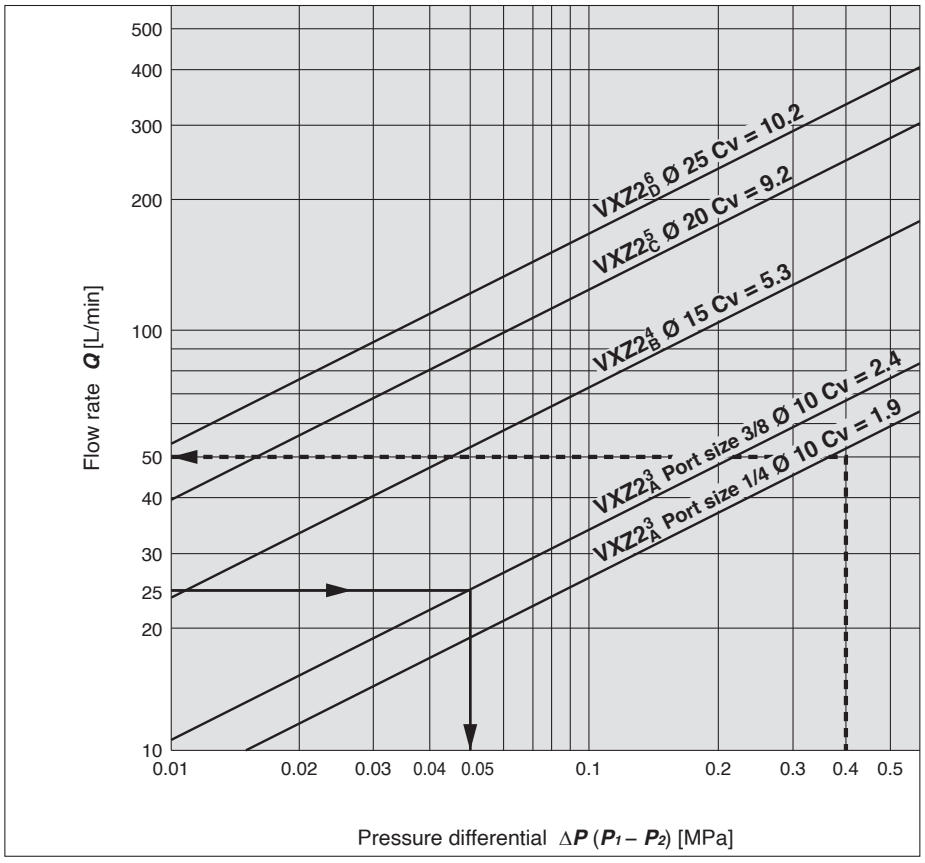

How to read the graph

The pressure differential for a Ø 10 orifice to supply a flow of 25 L/min ($VXZ2^3_A$, port size 3/8) will be $\Delta P \approx 0.05$ MPa.

The optimum size for a pressure differential of $\Delta P \approx 0.4$ MPa and a flow of 50 L/min will be the $VXZ2^3_A$ (Ø 10 orifice, port size 1/4).

Series VXZ
Specific Product Precautions 1

Be sure to read before handling. Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) and the Operation Manual for 2 Port Solenoid Valves for Fluid Control Precautions. Please download it via our website, http://www.smc.eu

Design

⚠Warning

1. Cannot be used as an emergency shutoff valve etc.

The valves presented in this catalogue are not designed for safety applications such as an emergency shutoff valve. If the valves are used in this type of system, other reliable safety assurance measures should also be adopted.

2. Extended periods of continuous energization

The solenoid coil will generate heat when continuously energized. Avoid using in a tightly shut container. Install it in a well ventilated area. Furthermore, do not touch it while it is being energized or right after it is energized.

3. Liquid rings

In cases with a flowing liquid, provide a bypass valve in the system to prevent the liquid from entering the liquid seal circuit.

4. Actuator drive

When an actuator, such as a cylinder, is to be driven using a valve, take appropriate measures to prevent potential danger caused by actuator operation.

5. Pressure (including vacuum) holding

It is not usable for an application such as holding the pressure (including vacuum) inside of a pressure vessel because air leakage is entailed in a valve.

6. When the conduit type is used as equivalent to an IP65 enclosure, install a wiring conduit etc.

7. When an impact, such as water hammer etc., caused by the rapid pressure fluctuation is applied, the solenoid valve may be damaged. Give an attention to it.

Selection

⚠Warning

1. Usage with low flow

Unstable flow may occur with the product under the following conditions: • low flow from the pump or compressor, etc. • use of several elbows or tees in the circuit, or • thin nozzles installed at the end of the piping etc. This can cause valve opening/closing failure, or oscillation, and cause a valve malfunction.

Please check the pressure differential and flow to select the appropriate size of the valve referring to the Flow-rate Characteristics on page 34. Ensure that pressure differential does not become lower than 0.01 MPa during ON (N.C.: Valve open).

Selection

⚠Warning

2. Fluid

1) Type of fluid

Select an appropriate valve with reference to the table below for the general fluid. Before using a fluid, check whether it is compatible with the materials of each model by referring to the fluids listed in this catalogue. Use a fluid with a kinematic viscosity of 50 mm^2/s or less.

Applicable Fluid

For Air	Air
For Water	Air, Water
For Oil	Air, Water, Oil
For Heated water	Air(up to 99 °C), Water, Heated water
For High temperature oil	Air(up to 99 °C), Water, Oil, High temperature oil

2) Flammable oil, Gas

Do not use the product with combustion-supporting or flamable fluids.

3) Corrosive gas

Cannot be used since it will lead to cracks by stress corrosion or result in other incidents.

4) When a brass body is used, then depending on water quality, corrosion and internal leakage may occur. If such abnormalities occur, exchange the product for a stainless steel body.

5) Use an oil-free specification when any oily particle must not enter the passage.

6) Applicable fluid on the list may not be used depending on the operating condition. Give adequate confirmation, and then determine a model, just because the compatibility list shows the general case.

3. Air quality

<Air>

1) Use clean air.

Do not use compressed air that contains chemicals, synthetic oils including organic solvents, salt or corrosive gases, etc., as it can cause damage or malfunction.

2) Install an air filter.

Install air filters close to valves at their upstream side. filtration degree of 5 μm or less should be selected.

3) Install an aftercooler or air dryer, etc.

Compressed air that contains excessive drainage may cause malfunction of valves and other pneumatic equipment. To prevent this, install an aftercooler or air dryer, etc.

4) If excessive carbon powder is generated, eliminate it by installing mist separators at the upstream side of valves.

If excessive carbon powder is generated by the compressor, it may adhere to the inside of the valves and cause a malfunction.

Series VXZ
Specific Product Precautions 2

Be sure to read before handling. Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) and the Operation Manual for 2 Port Solenoid Valves for Fluid Control Precautions. Please download it via our website, http://www.smc.eu

Selection

⚠Warning

<Water>

The use of a fluid that contains foreign objects can cause problems such as malfunction and seal failure by promoting wear of the valve seat and armature, and by sticking to the sliding parts of the armature etc. Install a suitable filter (strainer) immediately upstream from the valve. As a general rule, use 100 mesh.

The supply water includes materials that create a hard sediment or sludge such as calcium and magnesium. Since this scale and sludge can cause the valve to malfunction, install water softening equipment, and a filter (strainer) directly upstream from the valve to remove these substances.

Tap water pressure:

The water pressure for tap water is normally 0.4 MPa or less. However, in places like a high-rise building, the pressure may be 1.0 MPa. When selecting tap water, be careful of the maximum operating pressure differential.

When using water or heated water, poor operation or leaks may be caused by dezincification, erosion, corrosion, etc. We offer a stainless steel body type with improved corrosion resistance. Please use the one that fits your needs.


<Oil>

Generally, FKM is used as seal material, as it is resistant to oil. The resistance of the seal material may deteriorate depending on the type of oil, manufacturer or additives.

Check the resistance before using.

<Vacuum>

Please be aware that there is a range of pressure that can be used.

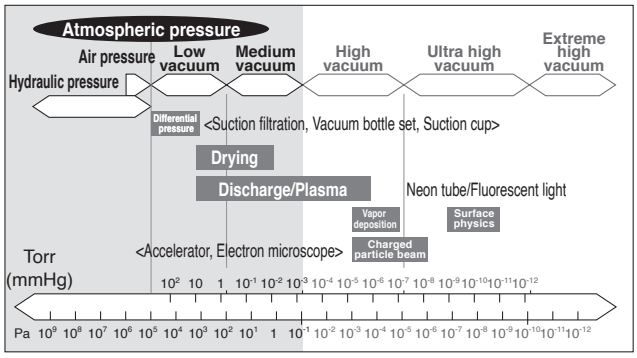

Vacuum piping direction: if the system uses a vacuum pump, we ask that you install the vacuum pump on the secondary side.

Also, install a filter on the primary side, and be careful that no foreign object is picked up.

Please replace the valve after operating the device approximately 300,000 times.

4. Ambient environment

Use within the operable ambient temperature range. Check the compatibility between the product's composition materials and the ambient atmosphere. Be certain that the fluid used does not touch the external surface of the product.


5. Countermeasures against static electricity

Take measures to prevent static electricity since some fluids can cause static electricity.

⚠Caution

1. Leakage voltage

Particularly when using a resistor in parallel with a switching element and using a C-R element (surge voltage suppressor) to protect the switching element, take note that leakage current will flow through the resistor, C-R element, etc., creating a possible danger that the valve may not turn off.

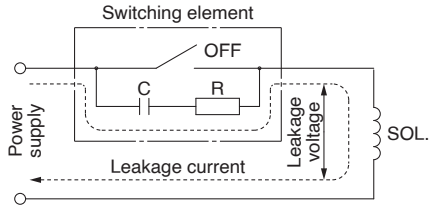

AC/Class B built-in full-wave rectifier coil: 10 % or less of rated voltage
DC coil: 2 % or less of rated voltage

2. Selecting model

Material depends on fluid. Select optimal models for the fluid.

3. When the fluid is oil.

The kinematic viscosity must not exceed 50 mm^2/s.

Mounting

⚠Warning

1. If air leakage increases or equipment does not operate properly, stop operation.

After mounting is completed, confirm that it has been done correctly by performing a suitable function test.

2. Do not apply external force to the coil section.

When tightening is performed, apply a wrench or other tool to the outside of the piping connection parts.

3. Mount a valve with its coil position upward, not downward.

When mounting a valve with its coil positioned downward, foreign objects in the fluid will adhere to the iron core leading to a malfunction.

4. Do not warm the coil assembly with a heat insulator etc.

Use tape, heaters, etc., for freeze prevention on the piping and body only. They can cause the coil to burn out.

5. Secure with brackets, except in the case of steel piping and copper fittings.

Series VXZ
Specific Product Precautions 3

Be sure to read before handling. Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) and the Operation Manual for 2 Port Solenoid Valves for Fluid Control Precautions. Please download it via our website, http://www.smc.eu

Mounting

⚠Warning

6. Avoid sources of vibration, or adjust the arm from the body to the minimum length so that resonance will not occur.

7. Painting and coating

Warnings or specifications printed or labeled on the product should not be erased, removed or covered up.

Disassembly/Assembly Procedures

⚠Caution

1. Before starting the disassembly work, be sure to shut off the power supply and pressure supply, and then release the residual pressure.

Disassembly

<N.C.>

1) Loosen the mounting screws.
The coil assembly, stopper, return spring and body assembly can be removed.

<N.O.>

1) Loosen the mounting screws.
The coil assembly, O-rings, adapter and body assembly can be removed.

Assembly

<Common to N.C. and N.O.>

1) Mount the components on the body in the reverse order of disassembly.
2) When changing the electrical entry direction, turn the coil assembly in a desired direction to mount it.
3) Push the coil assembly against the body and tighten the screws two or more rounds diagonally (Fig. 2) in the status that there are no gaps between the coil assembly and body (Fig. 1).
Proper tightening torque: 0.7 N·m
Tighten the screws in the order of "1 → 2 → 3 → 4 → 1 → 2 → 3 → 4".

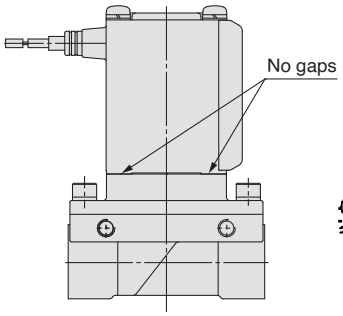


Fig.1

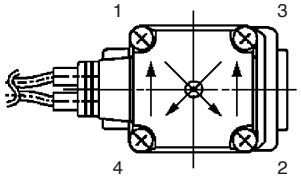



Fig.2

* After tightening the screws, make sure that there are no gaps between the coil and body (Fig. 1).
* After the disassembly and assembly have been completed, make sure that no leak occurs from the seal. Additionally, when restarting the valve, make sure that the valve operates correctly after checking the safety.


Disassembly/Assembly Procedures

⚠Caution

<N.C.>

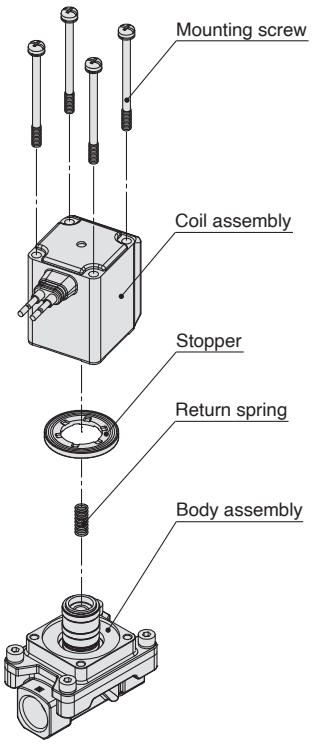

<N.O.>

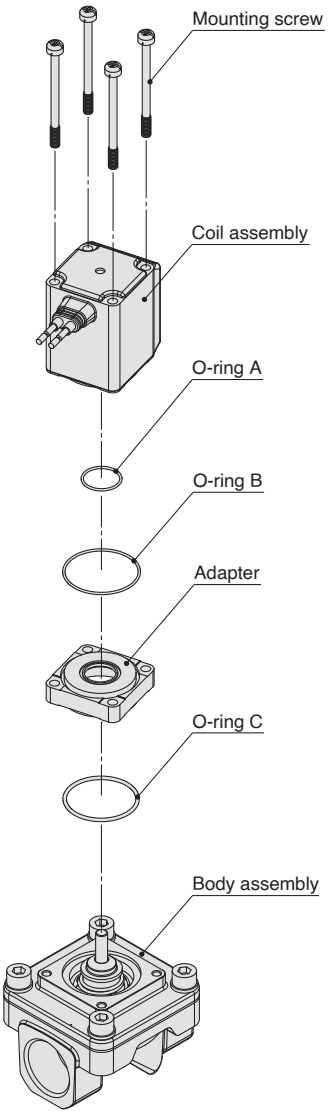

Specific Product Precautions 3-1

Be sure to read before handling. Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) and the Operation Manual for 2 Port Solenoid Valves for Fluid Control Precautions. Please download it via our website, http://www.smc.eu

Piping

⚠Warning

1. During use, deterioration of the tube or damage to the fittings could cause tubes to come loose from their fittings and thrash about.

To prevent uncontrolled tube movement, install protective covers or fasten tubes securely in place.

2. For piping the tube, fix the product securely using the mounting holes so that the product is not in the air.

⚠Caution

1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe. Avoid pulling, compressing, or bending the valve body when piping.

2. Avoid connecting ground lines to piping, as this may cause electric corrosion of the system.

3. Always tighten threads with the proper tightening torque.

When attaching fittings to valves, tighten with the proper tightening torque shown below.

Lower tightening torque will lead into fluid leakage.

Tightening Torque for Piping

Connection threads	Proper tightening torque N·m
Rc1/8	7 to 9
Rc1/4	12 to 14
Rc3/8	22 to 24
Rc1/2	28 to 32
Rc3/4	
Rc1	36 to 38


4. Connection of piping to products

When connecting piping to a product, avoid mistakes regarding the supply port etc.

5. Winding of sealant tape

When connecting pipes, fittings, etc., be sure that chips from the pipe threads and sealing material do not enter the valve.

Furthermore, when sealant tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.

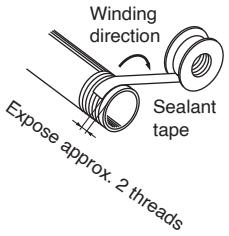

6. If a regulator and valve are connected directly, they may vibrate together and cause chattering. Do not connect directly.

7. If the cross-sectional area of piping for the fluid supply side is restricted, operation will become unstable due to inadequate pressure differential during valve operation. Use piping size for the fluid supply side that is suited to the port size.

Recommended Piping Conditions

1. When connecting tubes using One-touch fittings, provide some spare tube length shown in Fig. 1, recommended piping configuration.

Also, do not apply external force to the fittings when binding tubes with bands etc. (see Fig. 2.)

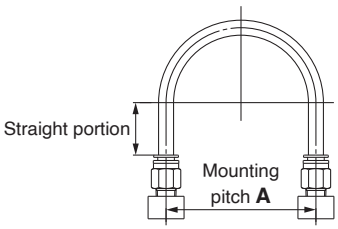


Fig. 1 Recommended piping configuration

Unit: mm

Tubing size	Mounting pitch **A**			Straight portion length
	Nylon tubing	Soft nylon tubing	Polyurethane tubing	
Ø 1/8"	44 or more	29 or more	25 or more	16 or more
Ø 6	84 or more	39 or more	39 or more	30 or more
Ø 1/4"	89 or more	56 or more	57 or more	32 or more
Ø 8	112 or more	58 or more	52 or more	40 or more
Ø 10	140 or more	70 or more	69 or more	50 or more
Ø 12	168 or more	82 or more	88 or more	60 or more

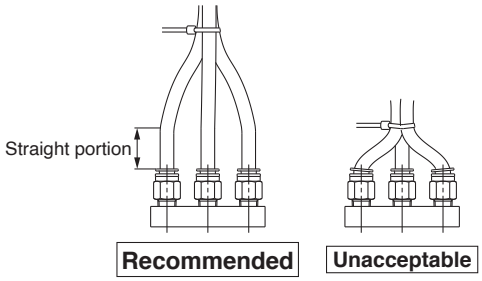


Fig. 2 Binding tubes with bands

Series VXZ
Specific Product Precautions 4

Be sure to read before handling. Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) and the Operation Manual for 2 Port Solenoid Valves for Fluid Control Precautions. Please download it via our website, http://www.smc.eu

Wiring

⚠Warning

1. The solenoid valve is an electrical product. For safety, install an appropriate fuse and circuit breaker before use.

When using multiple solenoid valves, it is not sufficient to merely install one fuse on the inlet side. In order to ensure the safety of the devices, select and install a fuse for each circuit.

2. Do not apply AC voltage to Class "H" coil AC type unless it is built in full-wave rectifier, or the coil will be damaged.

⚠Caution

1. As a rule, use electrical wire with a cross sectional area of 0.5 to 1.25 mm^2 for wiring.
Furthermore, do not allow excessive force to be applied to the lines.

2. Use electrical circuits which do not generate chattering in their contacts.

3. Use voltage which is within ±10 % of the rated voltage. In cases with a DC power supply where importance is placed on responsiveness, stay within ±5 % of the rated value. The voltage drop is the value in the lead wire section connecting the coil.

4. When a surge from the solenoid affects the electrical circuitry, install a surge voltage suppressor etc., in parallel with the solenoid. Or, adopt an option that comes with the surge voltage protection circuit. (However, a surge voltage occurs even if the surge voltage protection circuit is used.)

Operating Environment

⚠Warning

1. Do not use in an atmosphere having corrosive gases, chemicals, sea water, water, water steam, or where there is direct contact with any of these.

2. Do not use in explosive atmospheres.

3. Do not use in locations subject to vibration or impact.

4. Do not use in locations where radiated heat will be received from nearby heat sources.

5. Employ suitable protective measures in locations where there is contact with water droplets, oil or welding spatter, etc.

Maintenance

⚠Warning

1. Removing the product

The valve will reach a high temperature when used with high temperature fluids. Confirm that the valve temperature has dropped sufficiently before performing work. If touched inadvertently, there is a danger of being burned.

1) Shut off the fluid supply and release the fluid pressure in the system.
2) Shut off the power supply.
3) Dismount the product.

2. Low frequency operation

Switch valves at least once every 30 days to prevent malfunction. Also, in order to use it under the optimum state, conduct a regular inspection once a half year.

⚠Caution

1. Filters and strainers

1) Be careful regarding clogging of filters and strainers.
2) Replace filter elements after one year of use, or earlier if the pressure drop reaches 0.1 MPa.
3) Clean strainers when the pressure drop reaches 0.1 MPa.

2. Lubrication

When using after lubricating, never forget to lubricate continuously.

3. Storage

In case of long term storage after use, thoroughly remove all moisture to prevent rust and deterioration of rubber materials etc.

4. Exhaust the drain from an air filter periodically.

Operating Precautions

⚠Warning

1. If there is a possibility of reverse pressure being applied to the valve, take countermeasures such as mounting a check valve on the downstream side of the valve.

2. When problems are caused by a water hammer, install water hammer relief equipment (accumulator etc.), or use an SMC water hammer relief valve (Series VXR).

3. For pilot type 2-port solenoid valves, when the valve is closed, sudden pressure resulting from the startup of the fluid supply source (pump, compressor, etc.) may cause the valve momentarily to open and leakage to occur, so please exercise caution.

4. If the product is used in the conditions in which rapid decrease in the inlet pressure of the valve and rapid increase in the outlet pressure of the valve are repeated, excessive stress will be applied to the diaphragm, which causes the diaphragm to be damaged and dropped, leading to the operation failure of the valve. Check the operating conditions before use.

Specific Product Precautions 5


Be sure to read before handling. Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) and the Operation Manual for 2 Port Solenoid Valves for Fluid Control Precautions. Please download it via our website, http://www.smc.eu

Electrical Connections

⚠Caution

□ Grommet

Class B coil: AWG20 Insulator O.D. 2.6 mm
Class H coil: AWG18 Insulator O.D. 2.1 mm

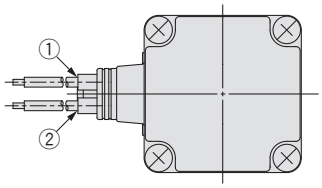

Rated voltage	Lead wire color	
	①	②
DC	Black	Red
100 VAC	Blue	Blue
200 VAC	Red	Red
Other AC	Gray	Gray

∗ There is no polarity.

□ DIN terminal

Disassembly


1. After loosening the binding head screw with flange, then if the housing is pulled in the direction of the arrow, the connector will be removed from the solenoid valve.
2. Pull out the binding head screw with flange from the housing.
3. There is a cutout on the bottom of the terminal block. Insert a small flat head screwdriver, etc. into this cutout, and remove the terminal block from the housing. (See figure below.)
4. Remove the ground nut, and pull out the washer and the rubber seal.

Wiring

1. Pass the cable through the ground nut, washer and rubber seal in this order, and insert these parts into the housing.
2. Loosen the binding head screw of the terminal block, then insert the core wire or the crimped terminal of the lead wire into the terminal, and securely fix it with the binding head screw. The binding head screw of the terminal block is M3.
   Note 1) Tighten the screw to a torque of between 0.5 and 0.6 N·m.
   Note 2) Cable O.D.: Ø 6 to Ø 12 mm
   Note 3) For an outside cable diameter of Ø 9 to 12 mm, remove the internal parts of the rubber seal before using.

Assembly


1. Pass the cable through the ground nut, washer, rubber seal and the housing in this order, and connect to the terminal block. Then, set the terminal block inside the housing. (Push in the terminal block until it snaps into position.)
2. Insert the rubber seal and the washer in this order into the cable entry of the housing, and then tighten the ground nut securely.
3. Insert the gasket between the bottom part of the terminal block and the plug attached to the equipment, and then insert the binding head screw with flange from the top of the housing, and tighten it.
   Note 1) Tighten the screw to a torque of between 0.5 and 0.6 N·m.
   Note 2) The orientation of the connector can be changed in steps of 90° by changing the method of assembling

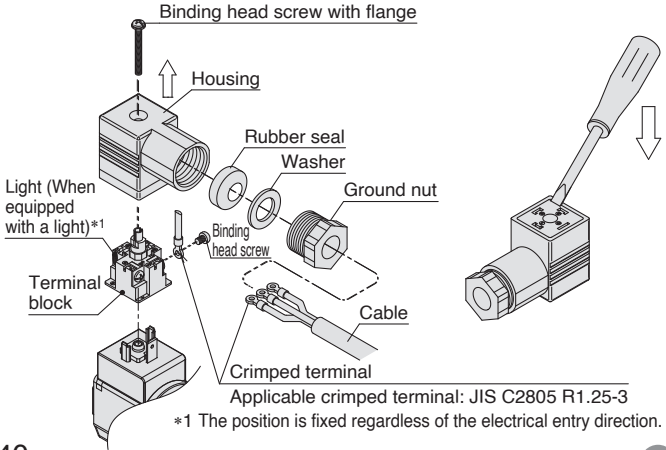

∗1 The position is fixed regardless of the electrical entry direction.

⚠Caution

Internal connections are as shown below.
Make connections to the power supply accordingly.

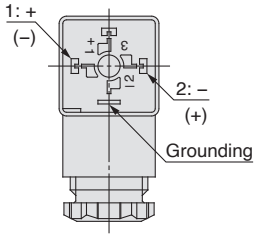


Terminal no.	1	2
DIN terminal	+ (–)	– (+)

∗ There is no polarity.

DIN (EN175301-803) Terminal

This DIN terminal corresponds to the Form A DIN connector with an 18 mm terminal pitch, which complies with EN175301-803B.

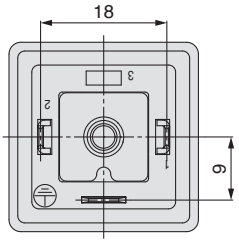

□ Conduit terminal

Disassembly

1. Loosen the mounting screw, and remove the terminal cover from the conduit terminal.

Wiring

1. Insert the cable into the conduit terminal.
2. Loosen the screw with UP terminal of the conduit terminal, then insert the core wire or the crimped terminal of the lead wire into the terminal, and securely fix it with the screw with UP terminal.
   Note 1) Tighten the screw to a torque of between 0.5 and 0.6 N·m.

Specific Product Precautions 6

Be sure to read before handling. Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) and the Operation Manual for 2 Port Solenoid Valves for Fluid Control Precautions. Please download it via our website, http://www.smc.eu


Electrical Connections

⚠ Caution


□ Conduit terminal

Assembly

1. Insert the gasket into the conduit terminal, and then clamp the terminal cover with the mounting screw.
   Note 1) Tighten the screw to a torque of between 0.5 and 0.6 N·m.
   Note 2) When changing the orientation of the conduit terminal, carry out the following procedure.
   1. Apply a tool (monkey wrench, spanner, etc.) to the width across flats of the conduit terminal, and turn the terminal in the counterclockwise direction.
   2. Loosen the lock nut.
   3. Turn the conduit terminal in the clamping direction (clockwise direction) to about 15° ahead of the desired position.
   4. Turn the lock nut by hand to the coil side until it is lightly tightened.
   5. Apply a tool to the width across flats of the conduit terminal, and turn it to the desired position (through an angle of about 15°) so as to clamp the conduit terminal.
   Note) When changing the orientation by applying additional tightening force to the conduit terminal from the factory-set position, turn no more than one half a turn.

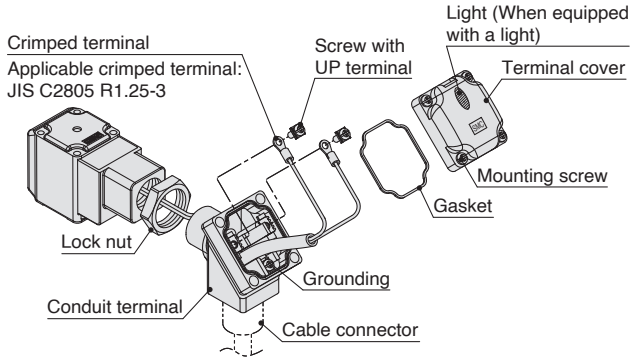

Make connections according to the marks shown below.
· Use the tightening torques below for each section.
· Properly seal the terminal connection (G1/2) with the special wiring conduit etc.

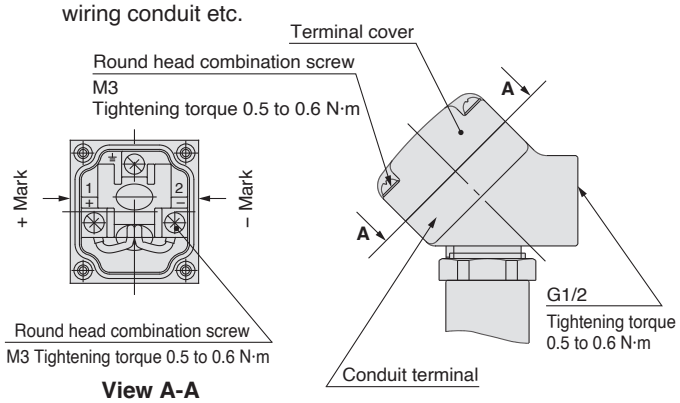

View A-A
(Internal connection diagram)

□ Conduit


When used as an IP65 equivalent, use seal to install the wiring conduit. Also, use the tightening torque below for the conduit.

Class B coil: AWG20 Insulator O.D. 2.5 mm

Class H coil: AWG18 Insulator O.D. 2.1 mm

Electrical Connections

⚠ Caution

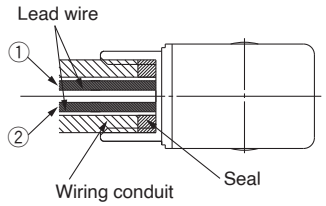

Rated voltage	Lead wire color	
	①	②
DC	Black	Red
100 VAC	Blue	Blue
200 VAC	Red	Red
Other AC	Gray	Gray

∗ There is no polarity.

Description	Part no.
Seal	VCW20-15-6


Note) Please order separately.

Electrical Circuits

⚠ Caution


[DC circuit]

Grommet, Flat terminal

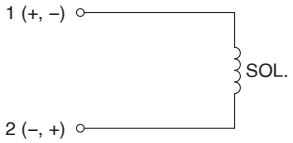


Without electrical option

Grommet, DIN terminal, Conduit terminal, Conduit

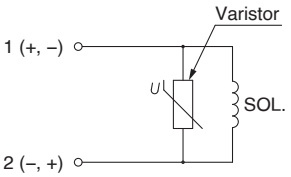

With surge voltage suppressor


DIN terminal, Conduit terminal

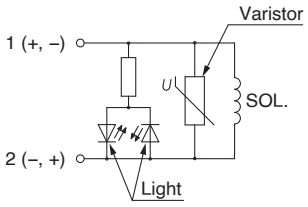

With light/surge voltage suppressor


[AC circuit]

Grommet, DIN terminal, Conduit terminal, Conduit

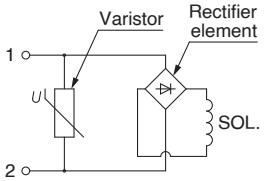

Without electrical option

DIN terminal, Conduit terminal

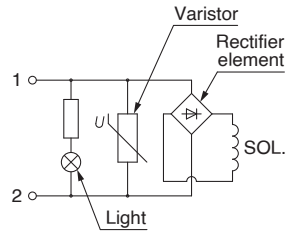

With light/surge voltage suppressor

One-touch Fitting

⚠ Caution

For information on handling One-touch fittings and on appropriate tubing, refer to page 38 and the Fittings & Tubing section of the "Handling Precautions for SMC Products" on the SMC website.

⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of **"Caution," "Warning"** or **"Danger."** They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) [1], and other safety regulations.

⚠ **Danger:**	**Danger** indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.
⚠ **Warning:**	**Warning** indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
⚠ **Caution:**	**Caution** indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

1) ISO 4414: Pneumatic fluid power – General rules and safety requirements for systems and their components.
ISO 4413: Hydraulic fluid power – General rules and safety requirements for systems and their components.
IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)
ISO 10218-1: Robots and robotic devices - Safety requirements for industrial robots - Part 1: Robots.
etc.

⚠ Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.
Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.
The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Our products cannot be used beyond their specifications.
Our products are not developed, designed, and manufactured to be used under the following conditions or environments.
Use under such conditions or environments is not covered.
1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Use for nuclear power, railways, aviation, space equipment, ships, vehicles, military application, equipment affecting human life, body, and property, fuel equipment, entertainment equipment, emergency shut-off circuits, press clutches, brake circuits, safety equipment, etc., and use for applications that do not conform to standard specifications such as catalogues and operation manuals.
3. Use for interlock circuits, except for use with double interlock such as installing a mechanical protection function in case of failure. Please periodically inspect the product to confirm that the product is operating properly.

⚠ Caution

We develop, design, and manufacture our products to be used for automatic control equipment, and provide them for peaceful use in manufacturing industries.
Use in non-manufacturing industries is not covered.
Products we manufacture and sell cannot be used for the purpose of transactions or certification specified in the Measurement Act.
The new Measurement Act prohibits use of any unit other than SI units in Japan.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".Read and accept them before using the product.

Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first. [2] Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.

2) Vacuum pads are excluded from this 1 year warranty.
A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Revision History

Edition B	- Xxxxxxxxxx	QS
Edition C	- Xxxxxxxxxx - Xxxxxxxxxxx	XU

SMC Corporation (Europe)

Austria	+43 (0)2262622800	www.smc.at	office.at@smc.com
Belgium	+32 (0)33551464	www.smc.be	info@smc.be
Bulgaria	+359 (0)2807670	www.smc.bg	sales.bg@smc.com
Croatia	+385 (0)13707288	www.smc.hr	sales.hr@smc.com
Czech Republic	+420 541424611	www.smc.cz	office.at@smc.com
Denmark	+45 70252900	www.smcdk.com	smc.dk@smc.com
Estonia	+372 651 0370	www.smcee.ee	info.ee@smc.com
Finland	+358 207513513	www.smc.fi	smc.fi@smc.com
France	+33 (0)164761000	www.smc-france.fr	smc.fi@smc.com
Germany	+49 (0)61034020	www.smc.de	info.de@smc.com
Greece	+30 210 2717265	www.smchellas.gr	sales@smchellas.gr
Hungary	+36 23513000	www.smc.hu	office.hu@smc.com
Ireland	+353 (0)14039000	www.smcautomation.ie	technical.ie@smc.com
Italy	+39 03990691	www.smcitalia.it	mailbox.it@smc.com
Latvia	+371 67817700	www.smc.lv	info.lv@smc.com
Lithuania	+370 5 2308118	www.smclt.lt	info.lt@smc.com
Netherlands	+31 (0)205318888	www.smc.nl	info@smc.nl
Norway	+47 67129020	www.smc-norge.no	post.no@smc.com
Poland	+48 222119600	www.smc.pl	technical.ie@smc.com
Portugal	+351 214724500	www.smc.eu	apoiocliente.pt@smc.com
Romania	+40 213205111	www.smcromania.ro	office.ro@smc.com
Russia	+7 (812)3036600	www.smc.eu	sales@smcru.com
Slovakia	+421 (0)413213212	www.smc.sk	sales.sk@smc.com
Slovenia	+386 (0)73885412	www.smc.si	office.si@smc.com
Spain	+34 945184100	www.smc.eu	post.es@smc.com
Sweden	+46 (0)86031240	www.smc.nu	order.se@smc.com
Switzerland	+41 (0)523963131	www.smc.ch	helpcenter.ch@smc.com
Turkey	+90 212 489 0 440	www.smcturkey.com.tr	satis@smcturkey.com.tr
UK	+44 (0)845 121 5122	www.smc.uk	sales.gb@smc.com
South Africa	+27 10 900 1233	www.smcza.co.za	Sales.za@smc.com

Printing CZ 00 Printed in Spain

Specifications are subject to change without prior notice and any obligation on the part of the manufacturer